



BLAST MAX 無線調理機 BC251TW 系列 | 使用者指南

重要安全說明

使用前請閱讀所有說明・僅供家庭使用

	請閱讀並複習操作與使用說明。
	表示若忽略與該符號相關的警告，將存在可能導致人身傷害、死亡或重大財產損失的危險。
	僅供家庭使用。
	表示連接 USB-C 線以為裝置充電的位置。
	請勿浸入在任何液體中。
使用電器產品時，應一律遵循基本安全注意事項，包括以下內容：	

⚠警告：為降低受傷、火災、電擊或財產損失的風險，必須一律遵循基本安全注意事項，包括以下編號警告及後續說明。請勿將本設備用於非原設計用途。

- 1 使用本設備及其配件前，請先閱讀所有說明。
- 2 僅使用與馬達底座底部標示之超低電壓相符的電源供應器。
- 3 **清潔調理杯內的 CrushBlade™ 刀片時，請務必小心操作。**刀片鋒利，請小心處理。操作 CrushBlade™ 刀片時若未小心使用，將有造成割傷的風險。
- 4 拆箱與設定設備時請慢慢進行並小心操作。本設備內含鋒利刀片，若操作不當可能造成傷害。
- 5 請清點所有內容物，以確保您擁有正確、安全操作本設備所需的全部零件。
- 6 使用前，請清洗所有可能接觸食物的零件。請依本使用者指南中的清洗說明進行。
- 7 **請勿攪拌高溫液體、起泡液體或碳酸液體，否則可能導致壓力升高，進而造成灼傷或其他使用者受傷的風險。**
- 8 **請勿將調理杯裝填超過最高水位線。**
- 9 刀片鋒利。請小心處理。
- 10 **加料與操作時請保持手部、頭髮與衣物遠離調理杯。請勿將手伸入調理杯或靠近 CrushBlade™ 刀片的位置。即使飲用蓋已移除，刀片仍可能啟動。**
- 11 處理前請移除所有餐具。未移除餐具可能導致調理杯受損或破裂，進而造成人身傷害。
- 12 為避免因電池損壞而導致火災風險，**請勿**將馬達底座浸入任何形式的液體或冰中。
- 13 **請勿**存放於戶外或讓馬達底座接觸任何液體。
- 14 **請勿**讓兒童操作本設備或當作玩具使用。在兒童附近使用任何設備時需密切監督。
- 15 本設備**不適合**身體、感官或心智能力受限者，或缺乏經驗與知識者單獨使用，除非負責其安全的人員在旁監督或指導設備的使用方式。
- 16 每次使用前，請檢查 CrushBlade™ 刀片是否損壞。
- 17 **請勿**嘗試自行磨利刀片。
- 18 **請勿**讓裝置的任何部位接觸高溫表面，包括爐具或其他加熱設備。
- 19 **請務必**在乾燥且平坦的表面上使用本設備。

重要安全說明

使用前請閱讀所有說明・僅供家庭使用

- 20 加料與操作時請保持手部、頭髮與衣物遠離調理杯。
- 21 **僅**使用產品隨附或 SharkNinja 建議的附件與配件。使用非 SharkNinja 建議或販售的配件 (包括罐頭瓶) 可能導致火災、觸電或人身傷害。
- 22 操作與處理設備時, 請避免接觸運轉中的零件。
- 23 **請勿**在調理杯空無一物時操作設備。
- 24 **請勿**將任何設備所提供的調理杯或配件放入微波爐中加熱。
- 25 **請勿**執行研磨操作。
- 26 **請勿**嘗試破壞安全鎖機制。操作前請確認調理杯與飲用蓋已正確安裝。
- 27 **請勿**讓調理杯與配件暴露於極端溫度變化中, 否則可能導致損壞。
- 28 使用時**切勿**讓設備處於無人看管的狀態。
- 29 若發現杯壁有未混合的食材, 請使用電源按鈕關閉設備, 並用刮刀將食材刮下。
- 30 CrushBlade™ 刀片仍在旋轉時, **請勿**嘗試從馬達底座移除調理杯和/或飲用蓋。待設備完全停止後再取下蓋子和/或調理杯。
- 31 **請勿**在攪拌前後長時間存放食材。某些食物可能含有活性成分或釋放會膨脹的氣體, 若留存於密封調理杯中, 將造成壓力升高, 進而可能導致受傷風險。
- 32 若設備過熱, 將啟動熱保護裝置並暫時停用馬達。若要重設, 請使用電源按鈕**關閉** Ninja Blast Max™ 無線調理機, 並等待約 60 分鐘冷卻後再重新使用。
- 33 未加入液體至調理杯時, **請勿**處理乾燥食材。本裝置不適用於乾攪作業。
- 34 請**僅**在蓋上飲用蓋時操作。
- 35 **請勿**將調理機放入冰箱或冷凍庫。
- 36 **請勿**使用延長線。請將充電器直接插入電源插座。
- 37 僅搭配設備隨附的充電器使用。請勿嘗試將此充電器與任何其他產品搭配使用。同樣地, 請勿嘗試使用任何其他充電器為本設備充電。


電池使用

- 1 電池是 Ninja Blast Max 無線調理機的電力來源。請仔細閱讀並遵循所有充電說明。
- 2 即使本設備已嚴重損壞, 也**請勿**將其焚燒。鋰電池可能會在火中爆炸。請務必妥善回收由鋰離子電池供電的產品。
- 3 由於本產品無電源線, 請在未使用、清潔或從飲用蓋飲用時, 確保調理機已**關閉**, 以防止刀片意外啟動。
- 4 請將電池遠離所有金屬物件, 如迴紋針、硬幣、鑰匙、釘子或螺絲。電池端子短路會增加火災或燒傷風險。
- 5 在不當使用的狀況下, 電池可能會釋出液體。請避免接觸此液體, 因其可能引起皮膚刺激或灼傷。若不慎接觸, 請立即以清水沖洗。若液體接觸到眼睛, 請立即尋求醫療協助。
- 6 本裝置內含無法更換的電池, 以及可能對使用者造成風險的活動零件。

請妥善保存此說明

零件

- A 飲用蓋
- B 提把
- C 調理杯, 附內建式 CrushBlade™ 刀片
- D 馬達底座
- E 充電線
- F 充電連接埠

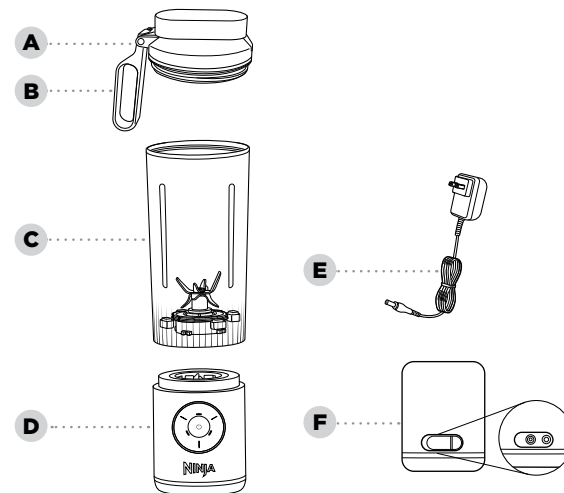

*調理杯的尺寸、數量、配件及顏色依型號而異。

充電

首次使用前, 請使用隨附的充電線為設備充電。充電埠位於馬達底座背面。

充電時, LED 指示燈會閃爍綠燈。⓪ 電量達到 100% 時, 電源圖示 LED 指示燈將恆亮綠燈。充電電可能需要 3 小時。

關於充電狀態的更多資訊, 請參閱 LED 指示燈一節。

第一次使用前

重要事項：請在繼續操作前閱讀本使用者指南開頭的所有警告。

備註：

- 所有配件皆不含 BPA。所有配件（馬達底座**除外**）皆可放置於洗碗機上層清洗。**請勿**使用加熱烘乾循環。將調理杯放入洗碗機前，請確認已從馬達底座移除調理杯。操作 CrushBlade™ 刀片時請小心。
- 請徹底沖洗並風乾所有適用的零件。

請移除設備上的所有包裝材料。由於刀片鋒利，拆封 CrushBlade™ 刀片時請小心。


若要清潔調理杯和杯蓋，請從馬達底座上取下調理杯，再取下杯蓋，然後倒入溫水至「MIN LIQUID（最低水位）」線。接著，加入一小滴液體洗碗精。為調理杯蓋好杯蓋，將調理杯安裝到馬達底座上，然後按下「Blend（攪拌）」。**攪拌完成後，從馬達底座取下調理杯，並將杯中液體倒入水槽。用溫水沖洗調理杯和杯蓋，然後風乾。**

清潔時**請勿**將馬達底座浸入水中。由於刀片鋒利，操作 CrushBlade™ 刀片時請小心。

使用控制面板

程序：

電源按鈕 —
開啟及關閉設備。
電池圖示 LED 指示燈顯示電池狀態。

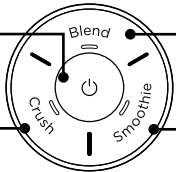

BLEND（攪拌）
30 秒手動攪拌模式，
可製作蛋白質奶昔

CRUSH（壓碎）
用於壓碎冰塊製作冰飲
的 Auto-iQ™ 程式。

SMOOTHIE（果昔）
用新鮮或冷凍水果製作果
昔的 Auto-iQ™ 程式



LED 指示燈顯示	電池狀態
所有程式都恆亮白燈	準備攪拌—— 會依電量亮起對應顏色。
恆亮綠燈	已充飽電。
閃爍綠燈	正在充電。
恆亮紅燈	電量低，需為設備充電。
閃爍紅燈	電量耗盡，需要充電。

LED 指示燈顯示	故障排除	解決方法
所有程式閃爍白燈	未正確安裝調理杯	重新將調理杯安裝到馬達底座上，順時針旋轉直至調理杯卡入到位。
所選攪拌程式閃爍紫燈	刀片卡住	食材卡住刀片或需要搖晃。倒入更多液體或從馬達底座取下調理杯，搖晃使阻塞物脫落，然後重新安裝調理杯並再次攪拌。
程式恆亮橘燈	馬達底座過熱	先讓馬達底座在室溫下冷卻至少 60 分鐘，然後再次攪拌。馬達底座過熱時無法充電。
電源 LED 指示燈閃爍紅燈和綠燈	所用充電器不合適	拔除該充電器，找到並更換為產品隨附的 13.3V DC ---、0.75A 充電線。
所有 LED 指示燈閃爍紅燈	馬達錯誤	請致電客服專線 0800-000-605

使用調理杯


重要事項：請在繼續操作前閱讀本使用者指南開頭的所有警告。

- 1 將調理杯安裝到馬達底座上，順時針旋轉直至卡入到位。
- 2 按下 **⏻** 按鈕**開啟**設備，直到所有程式 LED 指示燈，且 **⏻** 亮起，依剩餘電量顯示對應的顏色。往調理杯裝入食材之前，請確保設備已充飽電（**⏻** 恆亮綠燈）。

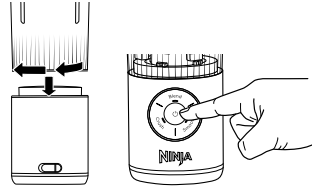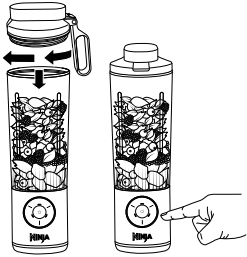

- 3 從調理杯上取下杯蓋並放入食材，請先倒入液體，再放入固體食材。若使用冰塊，請務必最後加入。**請勿**裝填食材至超過「**MAX FILL (最高裝填)**」線。將杯蓋順時針旋緊以固定在調理杯上。
- 4 若要使用 30 秒攪拌程式，請按下「**BLEND (攪拌)**」按鈕。若食材包含新鮮或冷凍水果，請按下「**SMOOTHIE (果昔)**」；若只用冰塊和液體製作冷飲，請按下「**CRUSH (壓碎)**」。如有需要，在每次攪拌之間搖晃調理機，讓食材鬆動。

- 5 攪拌完成後，逆時針旋轉調理杯後提起，即可從馬達底座取下調理杯。在刀片停止轉動之前，**請勿**取下調理杯。
- 6 打開飲用蓋即可飲用。
- 7 按下 **⏻** 按鈕以**關閉**設備。如果您想在未拆卸馬達底座的情況下飲用，請在飲用前**關閉**馬達底座。
- 8 請參閱「保養與維護」一節，了解清潔與收納說明。

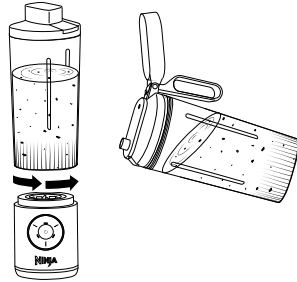

保養與維護

清潔

取下杯蓋後刀片可能仍在運轉。請務必先從馬達底座上取下調理杯，再進行清潔。

快速清潔

將調理杯從馬達底座上取下，並從調理杯上取下杯蓋。倒入溫水至「**MIN LIQUID (最低水位)**」線，然後加入 1 小滴洗碗精。為調理杯蓋好杯蓋，將調理杯安裝到馬達底座上，然後按下「**BLEND (攪拌)**」。讓設備攪拌幾秒鐘，然後再次按下「**BLEND (攪拌)**」按鈕以停止程式。從馬達底座上取下調理杯，倒掉杯中液體，再用溫水沖洗調理杯和杯蓋。

手洗

從馬達底座上取下調理杯，用溫肥皂水清洗杯蓋和調理杯。使用洗碗器具清潔調理杯內的 **CrushBlade™** 刀片組件。**CrushBlade™** 刀片組件很鋒利，清潔時請小心作業。倒掉杯中汙物，用溫水沖洗調理杯和杯蓋。**請勿**讓馬達底座接觸水或其他液體。讓所有零件風乾。

馬達底座

電機底座**不可**使用洗碗機清潔，且**不得**接觸或浸入水或其他液體中。如有需要，可用濕布擦拭馬達底座。

深度清潔

洗碗機

調理杯與飲用蓋可放置於洗碗機上層清洗。**請勿**使用加熱烘乾功能。放入洗碗機前，請先將調理杯與飲用蓋從馬達底座上取下。

存放

請將設備直立存放在陰涼乾燥的環境中。

請勿將已攪拌或未攪拌的食材長時間存放在附帶 **CrushBlade™** 刀片的調理杯中。

請勿在調理杯上堆放物品。請將其餘配件與設備存放在一起，或放置於不會造成損壞或引發危險的櫃子中。

如果您的設備需要維修，請致電客服專線：**0800-000-605**。為了更有效地協助您，請於 **sharkninja.tw** 完成產品線上註冊，並在致電時備妥產品。

產品保固註冊

請於購買後十 (10) 日內造訪 **sharkninja.tw** 並註冊您的全新 **Ninja®** 產品。您將需要提供商店名稱、購買日期、型號，以及您的姓名與地址。

註冊能讓我們在產品發出安全通知時聯絡您。完成註冊即表示您已閱讀並瞭解隨附說明中的使用說明與警告內容。

訂購替換零件

欲訂購額外零件與附件，請造訪 **sharkninja.tw**。

故障排除指南

⚠警告：為降低觸電與設備意外運作的風險，請在進行故障排除前將裝置關閉。

進行故障排除時，請確認裝置未在充電中。請確認裝置已完全充飽電，且調理杯已正確對齊。

控制面板無法關閉。

- 請按下  按鈕以開啟或關閉裝置。

無法均勻攪拌；食材卡住。

- 裝填調理杯時，請先加入液體，再加入新鮮水果或蔬菜，接著加入葉菜類蔬菜或香草。再加入種子、粉末或堅果醬，最後加入冰塊或冷凍食材。
- 若食材經常卡住，加入一些液體通常會有所幫助。您也可以攪拌時搖晃調理機，或將調理機倒置後啟動攪拌程式，再正放，以便讓食材鬆動。

飲用蓋難以安裝至調理杯。

- 將已組裝的馬達底座與調理杯放置於水平表面。將飲用蓋放在調理杯頂部並對齊螺紋，使飲用蓋平放。順時針旋轉至密合為止。

調理杯難以安裝至馬達底座。

- 將馬達底座放置於水平表面。將調理杯放在馬達底座頂部並對齊螺紋，使調理杯平放。順時針旋轉調理杯直至卡入到位。正確安裝調理杯後，控制面板上的程式 LED 指示燈會亮起白燈，且  按鈕會依當下電池電量顯示對應的顏色。

此一 (1) 年有限保固適用於從**新加坡商維諾瓦股份有限公司臺灣分公司**授權零售商購買的產品。保固範圍僅適用於原購買人及原產品，且不得轉讓。

SharkNinja 保證在正常家庭使用條件下，並依照《使用者指南》中所示的要求進行維護的情況下，本產品自購買日起一 (1) 年內不會出現材料或做工上的瑕疵，惟需遵守以下條件與排除項目：

保固涵蓋哪些項目？

- 原裝置及/或 SharkNinja 自行判定為有瑕疵的非耗損零件，可在原購買日期起一 (1) 年內進行維修或更換。
- 若為提供更換產品的情況，保固期限將於收到更換產品後六 (6) 個月或原保固期剩餘時間內（取較長者）結束。SharkNinja 保留以等值或更高價值產品進行更換的權利。

保固不涵蓋哪些項目？

- 正常磨損的零件（如攪拌容器、蓋子、杯子、刀片、調理機底座、可拆式內鍋、料理架、烤盤等），這些零件需定期維護及/或更換以確保裝置正常運作，並不在保固涵蓋範圍內。替換零件可於 sharkninja.tw 購買。
- 任何遭到竄改或用於商業用途的裝置。
- 因誤用、濫用、疏忽操作、未執行必要保養（如未保持馬達座凹槽清潔，避免食物殘渣或其他異物堆積），或因運送過程中搬運不當所造成的損壞。
- 衍生性和附帶性損害。
- 由非 SharkNinja 授權維修人員所造成的瑕疵。此類瑕疵包括由非 SharkNinja 授權人員在進行運送、修改或修理的過程中，所導致的 SharkNinja 產品（或其零件）損壞。

如何獲得維修服務

若您的設備在正常家庭使用條件下於保固期內無法正常運作，請造訪 sharkninja.tw 查詢產品保養與維護的自助服務。

產品保固註冊

請至 sharkninja.tw 上傳有效購買憑證（須包含購買日期與商品明細，如發票、出貨單或其他相關證明），並登錄產品序號，即可完成線上保固註冊。

限用物質含有情況標示聲明書

Declaration of the Presence Condition of the Restricted Substances Marking

設備名稱: Ninja Blast Max 無線調理機 Equipment name		型號(型式): BC251TW Series Type designation (Type)				
單元Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁺⁶)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
PCB	○	○	○	○	○	○
轉動馬達	○	○	○	○	○	○
塑膠外殼	○	○	○	○	○	○
內部配線	○	○	○	○	○	○
金屬元件	○	○	○	○	○	○
備考1. 超出0.1 wt %及 超出0.01 wt %係指限用物質之百分比含量超出百分比含量基準值。 Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition. 備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. 備考3. “-”係指該項限用物質為排除項目。 Note 3: The “-” indicates that the restricted substance corresponds to the exemption.						

掃描以註冊:
sharkninja.tw

型號:
BC251TW
製造編號:
X17ZQ603ZOH1



製造編號中前四位為製造日期編號。

In Manufacture Code, the first 4 letters are Manufacture Date Code.

以上圖中“X17Z”為例，X代表製造月份(參考表A)，17代表製造日期，Z代表製造年份(參考表B)。

Take “X17Z” on the above picture as example, “X” means Month (refer to Table A), “17” means Date, “Z” means Year (refer to Table B).

參考表A / Table A		參考表B / Table B	
月份 Month	編號 Code	年份 Year	編號 Code
1月 January	A	2016	A
2月 February	F	2017	F
3月 March	H	2018	H
4月 April	J	2019	J
5月 May	K	2020	K
6月 June	Q	2021	Q
7月 July	R	2022	R
8月 August	S	2023	S
9月 September	U	2024	U
10月 October	Z	2025	Z
11月 November	X	2026	X
12月 December	Y	2027	Y
接下来 Next		從A座新開始 Start over with “A”	

NINJA

BLAST MAX PORTABLE BLENDER

BC251TW Series | Owner's Guide



IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

	Read and review instructions for operation and use.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	For household use only.
	Indicates location to attach cable for charging unit.
	Do not immerse in any liquid.
When using electrical appliances, basic safety precautions should always be followed, including the following:	

⚠WARNING: To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

- Read all instructions prior to using the appliance and its accessories.
- Use only a power supply with an extra low voltage corresponding to the marking on the bottom of the motor base.
- ALWAYS** exercise care when cleaning the CrushBlade™ Assembly inside the vessel. The blades are sharp, handle carefully. Failure to use care when handling the CrushBlade™ Assembly will result in a risk of laceration.
- Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp blades that can cause injury if mishandled.
- Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- Before use, wash all parts that may contact food. Follow washing instructions covered in this Owner's Guide.
- DO NOT** blend hot, effervescent, or carbonated liquids, as doing so may cause pressure buildup, resulting in risk of burns or other injuries to the user.
- DO NOT** fill the blending vessel past the **MAX FILL** line.
- Blades are sharp. Handle carefully.
- Keep hands, hair, and clothing out of the vessel when loading and operating. **DO NOT put your hands inside the vessel or anywhere near the CrushBlade™ Assembly. Blades can still activate when the sip lid is removed.**
- Remove utensils prior to processing. Failure to remove may cause the blending vessel to be damaged or to shatter, which may cause personal injury.
- To protect against the risk of fire from battery damage, **DO NOT** submerge the motor base in any form of liquid or ice.
- DO NOT** store outdoors or allow the motor base to come into contact with any liquid.
- DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Before each use, inspect CrushBlade™ Assembly for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
- DO NOT** attempt to sharpen blades.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

- 18 **DO NOT** allow any part of the unit to contact hot surfaces, including stoves and other heating appliances.
- 19 **ALWAYS** use the appliance on a dry and level surface.
- 20 Keep hands, hair, and clothing out of the vessel when loading and operating.
- 21 **ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- 22 During operation and handling of the appliance, avoid contact with moving parts.
- 23 **DO NOT** operate the appliance with an empty container.
- 24 **DO NOT** microwave any containers or accessories provided with the appliance.
- 25 **DO NOT** perform grinding operations.
- 26 **DO NOT** attempt to defeat the interlock mechanism. Ensure the vessel and sip lid are properly installed before operation.
- 27 **DO NOT** expose the containers and accessories to extreme temperature changes. They may experience damage.
- 28 **NEVER** leave the appliance unattended while in use.
- 29 If you find unmixed ingredients sticking to the sides of the cup, turn off the appliance using the Power Button, and use a scraper to dislodge ingredients.
- 30 **DO NOT** attempt to remove the vessel and/or sip lid from the motor base while the CrushBlade™ Assembly is still spinning. Allow the appliance to come to a complete stop before removing lid and/or vessel.
- 31 **DO NOT** store ingredients for extended amounts of time before or after blending them. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury.
- 32 If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, turn **OFF** the Ninja Blast™ Max Portable Blender using the Power Button and allow it to cool for at least 60 minutes before using again.
- 33 **DO NOT** process dry ingredients without adding liquid to the blending vessel. Unit is not intended for dry blending.
- 34 Operate **ONLY** with the sip lid on.
- 35 **DO NOT** refrigerate or freeze the blender motor base.
- 36 **DO NOT** use an extension cord. Plug charger directly into an electric outlet.
- 37 Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.


BATTERY USE

- 1 The battery is the power source for the Ninja Blast Max Portable Blender. Carefully read and follow all charging instructions.
- 2 **DO NOT** incinerate this appliance even if it is severely damaged. The lithium-ion batteries can explode in a fire. Always properly recycle products powered by lithium-ion batteries.
- 3 Since there is no power cord, prevent accidental blade activation by ensuring the blender is turned **OFF** when not in use, while cleaning, or when drinking from the sip lid.
- 4 Keep the battery away from all metal objects such as paper clips, coins, keys, nails, or screws. Shorting the battery terminals together increases the risk of fire or burns.
- 5 Under abusive conditions, liquid may be ejected from the battery. Avoid contact with this liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
- 6 This unit contains batteries that are only replaceable by skilled persons.
- 7 This unit contains batteries that are non-replaceable and moving parts that potentially present risk to the user.

PARTS

- A Sip Lid
- B Carry Handle
- C Blending Vessel with built-in CrushBlade™ Assembly
- D Motor Base
- E Charging Cord
- F Charging Port

*Blending vessel size and quantity, accessories, and colour vary by model.

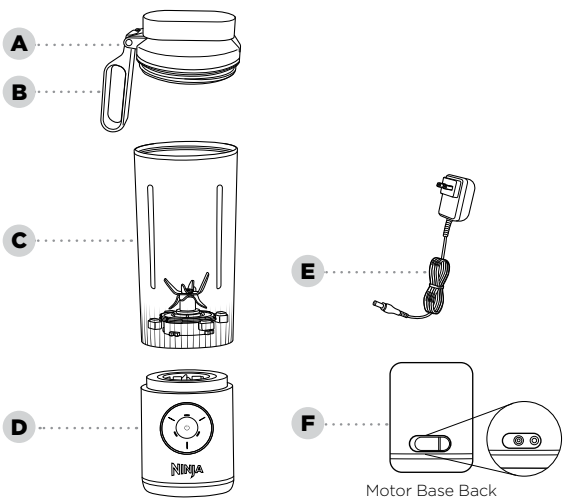

CHARGING ⚡

Charge the unit before first use with the provided charging cord. Charging port is located at the back of the motor base.

When charging, the LED will flash GREEN. When charge reaches 100%, the power icon LED will remain solid GREEN. A full charge may take up to 3 hours.

Refer to the LED section for additional information on charging states.

SAVE THESE INSTRUCTIONS

BEFORE FIRST USE

IMPORTANT: Review all warnings at the beginning of this Owner’s Guide before proceeding.

NOTE:

- All attachments are BPA-free. All attachments **EXCEPT** the motor base are top-rack dishwasher safe. **DO NOT** use a heated dry cycle. Ensure the vessel is removed from the motor base before placing the vessel in the dishwasher. Exercise care when handling CrushBlade™ Assembly.
- Thoroughly rinse and air dry all appropriate parts.

Remove all packaging materials from the unit. Exercise care when unpacking CrushBlade™ Assembly, as the blades are sharp.

To clean the vessel and lid, remove the vessel from the motor base, remove the lid, and add warm water up to the MIN LIQUID line. Next, add a small drop of liquid dish soap. Securely attach the lid to the vessel, attach the vessel to the motor base, and blend. After the blend has completed, remove the vessel from the motor base and empty the contents into a sink. Rinse the vessel and lid with warm water then let air dry.

DO NOT submerge the motor base in water when cleaning. Exercise care when handling CrushBlade™ Assembly, as the blades are sharp.

USING THE CONTROL PANEL


PROGRAMS:

POWER BUTTON

Power unit **ON** and **OFF**. Battery icon LEDs display battery status.

CRUSH

Auto-iQ™ program for ice crushing power for frozen drinks.

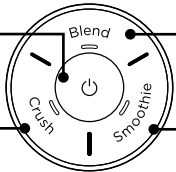

BLEND

30-second manual blend mode for protein shakes.

SMOOTHIE

Auto-iQ™ program for fresh and frozen fruit smoothies.



LED Shows	BATTERY Status
All programs solid WHITE	Ready to blend—  displays battery life color.
 solid GREEN	Fully charged.
 flashing GREEN	Charging state.
 solid RED	Low battery—charge unit.
 flashing RED	No battery—requires charge.

LED Shows	TROUBLESHOOTING	Solutions
All Programs Flashing WHITE	Vessel Improperly Installed	Re-install the vessel on the motor base, twisting clockwise until the vessel clicks into place.
Selected Blend Program Flashing PURPLE	Blades Blocked	Ingredients are stuck in blades or agitation is needed. Add more liquid or remove the vessel from the motor base and shake the blockage free before reinstalling the vessel and blending again.
Programs Solid Orange	Motor Base Overheating	Let the motor base sit at room temperature to cool down for at least 60 minutes before blending again. Motor base will not charge when overheated.
Power LED Flashing RED & GREEN	Incorrect Charger	Unplug and find provided 13.3V DC  , 0.75A charging cable.
All LEDs Flashing RED	Motor Error	Call Customer Service at 0800-000-605

USING THE BLENDING VESSEL


IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

- 1 Install the vessel onto the motor base, rotating clockwise until it clicks into place.
- 2 Turn unit **ON** by pressing the  button until all program LEDs illuminate solid WHITE and the  illuminates, displaying the remaining battery life colour. Ensure the unit is fully charged ( is solid GREEN) before loading the vessel.

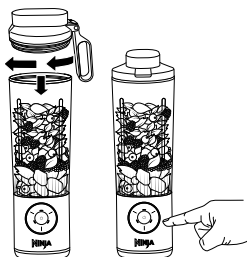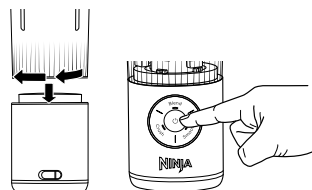

- 3 Remove lid from vessel and add ingredients, starting with liquids then solid ingredients. If using ice, always add last. **DO NOT** fill ingredients past the **MAX FILL** line. Secure lid onto the vessel, twisting clockwise to tighten.
- 4 For a 30-second blend, press the BLEND button. For ingredients including fresh or frozen fruit, press SMOOTHIE, and for frozen drinks with just ice and liquid, press CRUSH. If needed, shake blender between blends to move ingredients.

- 5 When blending is complete, remove the vessel from the motor base by rotating the vessel anticlockwise and lifting up. **DO NOT** remove the vessel before the blade has stopped moving.
- 6 Open the sip lid to sip.
- 7 Power **OFF** the unit by pressing the  button. If you want to drink with the motor base attached, turn the motor base **OFF** before drinking.
- 8 Refer to the Care & Maintenance section for cleaning and storage instructions.

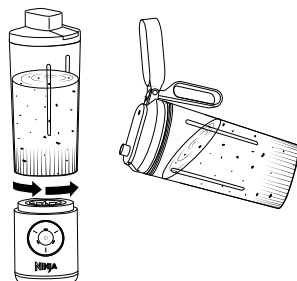

CARE & MAINTENANCE

CLEANING

Blades can still operate when the lid is removed. Always remove the vessel from the motor base before cleaning the vessel.

Quick Clean

Remove vessel from motor base and remove lid from vessel. Add warm water to the MIN. LIQUID line then add 1 small drop of dish soap. Secure the lid onto the vessel, attach the vessel onto the motor base, and press BLEND. Let unit blend for a few seconds, then press the BLEND button again to stop the program. Remove vessel from motor base, empty contents, and rinse vessel and lid with warm water.

Hand Washing

Remove the vessel from the motor base and wash the lid and vessel with warm soapy water. Use a dishwashing utensil to clean the CrushBlade™ Assembly inside the vessel. Exercise care when cleaning the CrushBlade™ Assembly as the blades are sharp. Empty contents and rinse vessel and lid with warm water. **DO NOT** expose the motor base to water or other liquids. Let all parts air dry.

Motor Base

Motor base is **NOT** dishwasher safe and **CANNOT** be exposed to or submerged in water or other liquid. If needed, wipe motor base with a damp cloth.

DEEPER CLEAN

Dishwasher

Vessel and sip lid are top-rack dishwasher safe. **DO NOT** use a heated dry cycle. Ensure the vessel and sip lid are removed from the motor base before placing them in the dishwasher.

STORING

Store the unit upright in a cool, dry environment.

DO NOT store blended or unblended ingredients in the vessel with the CrushBlade™ Assembly for prolonged periods of time.

DO NOT stack items on top of the vessel. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

If your unit needs servicing, call Customer Service at **0800-000-605**. So we may better assist you, please register your product online at sharkninja.tw and have the product on hand when you call.

PRODUCT REGISTRATION

Please visit sharkninja.tw to register your new Ninja® product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit sharkninja.tw

TROUBLESHOOTING GUIDE

⚠ WARNING: To reduce the risk of shock and unintended operation, turn OFF unit before troubleshooting.

Ensure the unit is not charging when troubleshooting. Ensure the unit is fully charged and vessel is properly aligned.

Control panel doesn't turn off.

- Press the  button to turn the unit **ON** and **OFF**.

Doesn't mix well; ingredients get stuck.

- When filling the vessel, start with liquid then fresh fruit or veggies, followed by leafy greens or herbs. Then add seeds, powders, or nut butters. Finish with ice or frozen ingredients.
- If ingredients are routinely getting stuck, adding some liquid will usually help. You can also shake the blender while blending or turn the blender upside down, start a blend cycle, and turn it right side up to move ingredients while blending.

Sip lid is hard to assemble onto the vessel.

- Set the assembled motor base and vessel on a level surface. Place the sip lid on top of the vessel and align the threads so the sip lid sits flat. Turn clockwise until you have a tight seal.

Vessel is hard to assemble onto the motor base.

- Set the motor base on a level surface. Place the vessel on top of the motor base and align the threads so the vessel sits flat. Turn clockwise until the vessel clicks into place. When the vessel is properly installed, the program LEDs on the control panel will be white and the  button will display the current battery level.

Shark NINJA

ONE (1) YEAR LIMITED WARRANTY

NJA_1_YR_IB_LMTD_WRNTY_TW_EN

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of **OSONOVA PRIVATE LIMITED TAIWAN BRANCH**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, blender bases, removable pots, racks, pans, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at **sharkninja.tw**.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit **sharkninja.tw** for product care and maintenance self-help. Our Customer Service Specialists are also available at **0800-000-605** to assist with product support and warranty service options. So we may better assist you, please register your product online at **sharkninja.tw** and have the product on hand when you call.

How to initiate a warranty claim

You must call **0800-000-605** to initiate a warranty claim. You will need the receipt as proof of purchase. We also ask that you register your product online at **sharkninja.tw** and have the product on hand when you call, so we may better assist you. A Customer Service Specialist will provide you with return and packing instruction information.

註冊您購買的產品
REGISTER YOUR PURCHASE
sharkninja.tw

請記錄此資訊

型號： _____
序號： _____
購買日期： _____
(請保留收據)
購買商店： _____

技術規格

電壓： 13.3V DC，0.75A

RECORD THIS INFORMATION

Model Number: _____
Serial Number: _____
Date of Purchase: _____
(Keep receipt)
Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 13.3V DC , 0.75A

經銷商：
新加坡商維諾瓦股份有限公司臺灣分公司
104105臺北市中山區南京東路3段168號2樓之1

Distributed by:
OSONOVA PRIVATE LIMITED TAIWAN BRANCH
2F.-1, No. 168, Sec. 3, Nanjing E. Rd., Zhongshan Dist., Taipei City
sharkninja.tw

圖例可能與實際產品有所不同。我們將持續努力改善我們的產品，因此本文中的規格可能會有所變更，恕不另行通知。

NINJA 是 SharkNinja Operating LLC 的註冊商標。

AUTO-IQ、CRUSHBLADE 和 NINJA BLAST 是 SharkNinja Operating LLC 的商標。

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademark of SharkNinja Operating LLC.
AUTO-IQ, CRUSHBLADE, and NINJA BLAST are trademarks of SharkNinja Operating LLC.

© 2025 SharkNinja Operating LLC