

Shark **EVOPOWER™** **DX**

Rechargeable handheld
vacuum cleaner
手持吸塵器

WV517TW

OWNER'S GUIDE **使用者指南**

**Thank you for buying this
Shark product.**

- Before using the vacuum cleaner, please read this manual thoroughly and be sure to use the vacuum cleaner correctly and safely.
- Please keep this manual in a safe place.

感謝您購買這款 Shark 產品。

- 使用吸塵器之前，請仔細閱讀本使用手冊，並務必正確且安全地使用吸塵器。
- 請妥善保管本使用手冊。



This manual applies to: WV517TW

Specifications

Voltage	11.1V
Rated power consumption	205W
Continuous operating time	
• Eco Mode	Approximately 40 minutes
• Normal Mode	Approximately 20 minutes
• Boost Mode	Approximately 8 minutes
Charging time	Approximately 3.5 hours
Weight when in use	Approximately 680g*

*When battery is installed in unit

CONTENTS

Introduction

Included items	3
Safety warnings	4

Preparation for use

Charging dock assembly	6
Charging	7
About the lithium-ion battery	8

How to use

Operation	9
Using accessories for cleaning	10

Maintenance

Emptying the dust cup	12
Cleaning the dust cup	12
Cleaning the filter	13
Cleaning the electric floor nozzle	14
Troubleshooting	15

Other

Replacement parts and accessories	17
Warranty and registration	18
• Product registration (for online registration)	24

INCLUDED ITEMS

- A** Wand

B Duster Crevice Tool

C Upholstery Tool

 
D Motorized Hand Tool

E Battery
- F** Charging dock

G Accessory stand

H Active Floor Nozzle and Wand

*Installed in the vacuum cleaner at time of shipping.

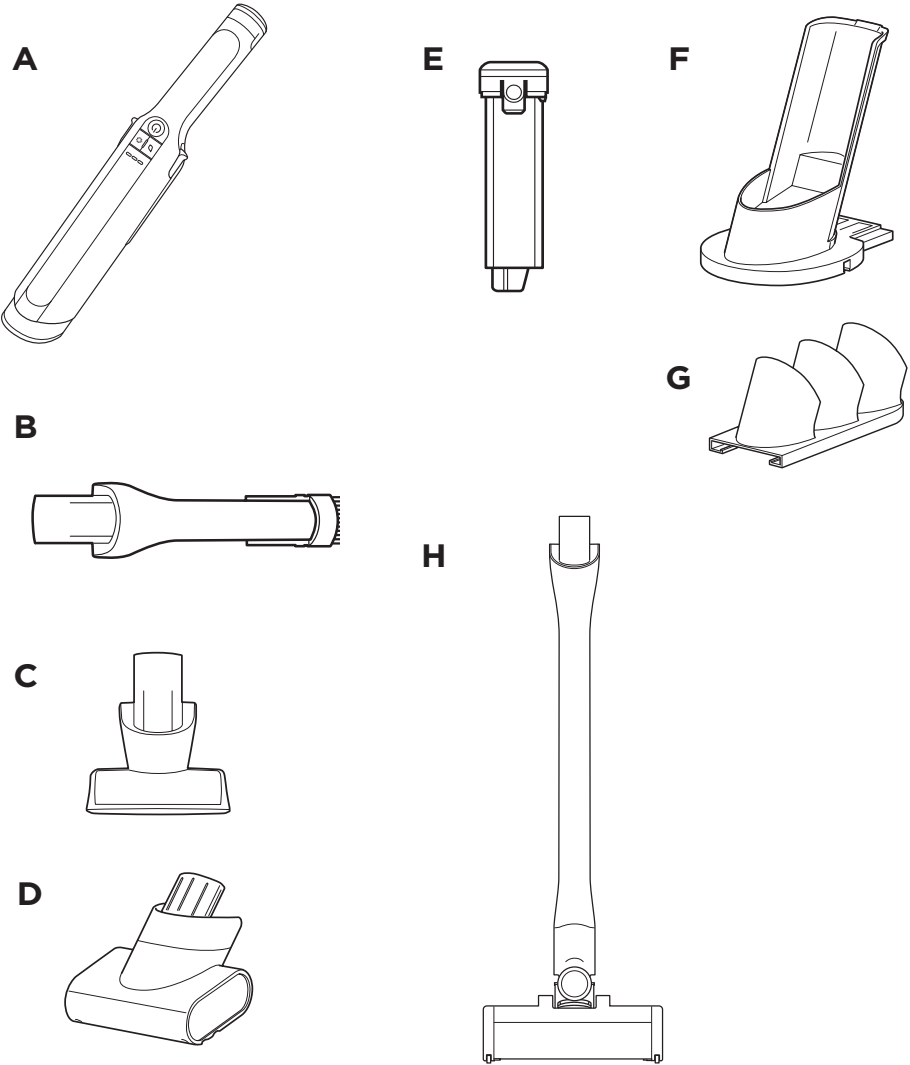

SAFETY WARNINGS

This product is intended for home use. Do not use the vacuum cleaner for commercial purposes or for purposes other than cleaning.

The following are guidelines to prevent injury and property damage to the user or others.

If the power plug cannot be inserted into the outlet, turn it the other way and reinsert. Contact customer support if the plug does cannot be inserted properly into the outlet even when turned the other way. Do not force the plug into the outlet or alter the plug to make it fit.

 **WARNING** (Death or serious injury can result if the vacuum cleaner is used incorrectly.) Follow the instructions below to reduce the risk of fire, electric shock, injury, or physical damage.

 **WARNING** Do not use the vacuum cleaner to vacuum up water or other liquids.

WARNINGS ABOUT POWER SUPPLIES, INCLUDING ELECTRIC WIRES, CHARGERS, AND VACUUM CLEANERS

1. This product does not contain parts that can be repaired by customers.
2. Do not vacuum up liquids.
3. Do not remove the filter or dust cup or expose the parts of the vacuum cleaner to water or other liquids.
4. Stop using the vacuum cleaner if it becomes damaged.
5. To avoid fire, explosion, or injury, prior to using the vacuum cleaner, inspect the vacuum cleaner and charger and ensure that they are not damaged. Stop using the vacuum cleaner if any parts are damaged.
6. Do not use outdoors or on wet surfaces. Only use the vacuum cleaner on dry surfaces.
7. Do not use the vacuum cleaner if it does not work normally, or if it is dropped, damaged, left outside, or submerged in water.
8. Do not handle the vacuum cleaner or the power supply plug with wet hands.
9. Do not leave the vacuum cleaner with the power on.
10. Do not place the vacuum cleaner in places where its surface could heat up.
11. Make sure to turn off the power to the vacuum cleaner before connecting it to the charger.
12. To charge the vacuum cleaner, use the included charging dock with charging adapter (XDCKWV500TW) or the genuine Shark® battery charger (WV500TWTP), sold separately. Do not use batteries other than XSBT330AS. There is a risk of fire if other parts are used. Charge the vacuum cleaner in a flat, stable area.

13. Do not dispose of the vacuum cleaner by burning it even if it is severely damaged. The lithium-ion battery may explode in fire.

GENERAL USE

14. Do not carry the charger by its cord. When removing the vacuum cleaner from the outlet, always do so by holding the power supply plug itself. Do not remove from the outlet by pulling on the cord.
15. Do not let the charger cord come into contact with warm surfaces.
16. Be sure to use the vacuum cleaner as described in the manual. Do not use the vacuum cleaner for any purpose other than those explained in this user manual.
17. Use the vacuum cleaner in well-lit locations.
18. To prevent malfunction when attaching and removing the charger, dust cup, filter, and other accessories, be sure to turn off the power to the vacuum cleaner.
19. Do not place foreign objects inside the suction port or openings.
20. Do not use the vacuum cleaner if its opening is blocked. Remove any objects that may obstruct the flow of air, such as dirt, lint, or hair.
21. Individuals with physical, sensory, or cognitive disabilities, or those who lack sufficient experience or knowledge (such as children) should not use this product except under the supervision or guidance of someone who is responsible for their safety.
 - a) Children should not play with the vacuum cleaner.
 - b) Children should not clean or perform maintenance on the vacuum cleaner except under the supervision of a guardian.

22. Do not use the vacuum cleaner if the dust cup and filter are not properly attached.
23. Do not use the vacuum cleaner if the suction pathway is blocked. If there is a foreign object inside, turn off the power to the vacuum cleaner, remove all foreign objects, and turn the power back on.
24. While the vacuum cleaner is running, do not put your hair, face, fingers, feet, or any loose clothing near any of its openings.
25. Use only genuine Shark® accessories.
26. Do not charge the battery at temperatures under 10° C (50° F) or over 40° C (104° F). Charging inappropriately or in environments where the temperature is higher or lower than the specified range may damage the battery, increasing the risk of fire.
27. Store the vacuum cleaner and accessories indoors where the temperature will not fall below 3° C (37.4° F). When using, make sure that vacuum cleaner is at room temperature.

DUST CAP, FILTER, AND ACCESSORIES

Check the following before turning the vacuum cleaner on.

28. After performing maintenance on the filter, make sure to fully dry it before reinstalling it in the vacuum cleaner to ensure that water does not get inside the electrical components.
29. After performing regular maintenance on the dust cup and filter, make sure that they are properly installed.
30. Please ensure that the accessories are not clogged and do not allow your hair, face, or body to come into contact with the openings.
31. Do not use any filters or accessories except genuine Shark® products. The warranty will be voided if non-genuine parts are used.

GENERAL CLEANING

 
32. Do not vacuum up the following items.
 - a) Liquids
 - b) Large objects
 - c) Hard objects and sharp objects (glass, nails, screws, coins, rocks, etc.)
 - d) Large quantities of dust (drywall dust, fireplace ashes, cinders, flour, etc.). Do not use the vacuum cleaner as an attachment to an electric dust collection tool.
 - e) Objects that are smoking or on fire (hot coals, cigarette butts, matches, etc.)

- f) Flammable or combustible items (diesel oil, gasoline, kerosene, etc.)
 - g) Toxic substances (chlorine bleach, ammonia, drainpipe cleaner, etc.)
33. Do not submerge the vacuum clear in water or other liquids.
 34. Watch your step when cleaning stairs.

BATTERY USAGE

35. The battery is the vacuum cleaner's power source. To prevent malfunction, when carrying the vacuum cleaner, make sure the power is off and that your fingers are not touching the power button. Do not charge the vacuum cleaner when the power is on.
36. Please always use the charger packaged with the vacuum cleaner to charge it. If a non-genuine charger is used, there is a risk of fire.
37. When using the vacuum cleaner, use only the lithium-ion battery packaged with the product. Use of another battery could result in injury or fire.
38. Mishandling the battery could cause electrolytic solution to leak out. This liquid could cause inflammation or burns, so do not touch this liquid. If the liquid sticks to your skin or clothing or gets into your eyes, seek immediate medical attention after washing it off with water.
39. Store the vacuum cleaner indoors. To preserve the life of the battery, do not store the vacuum cleaner in locations where the temperature is less than 3° C (37.4° F) or more than 40° C (104° F).
40. Do not expose the vacuum cleaner or battery to flame or temperatures above 130° C (266° F), as explosion could result.
41. This product does not contain parts that can be repaired by customers. Do not modify or repair the vacuum cleaner or the battery. Do not use the vacuum cleaner if it has been modified or damaged.

ASSEMBLY OF THE CHARGING DOCK

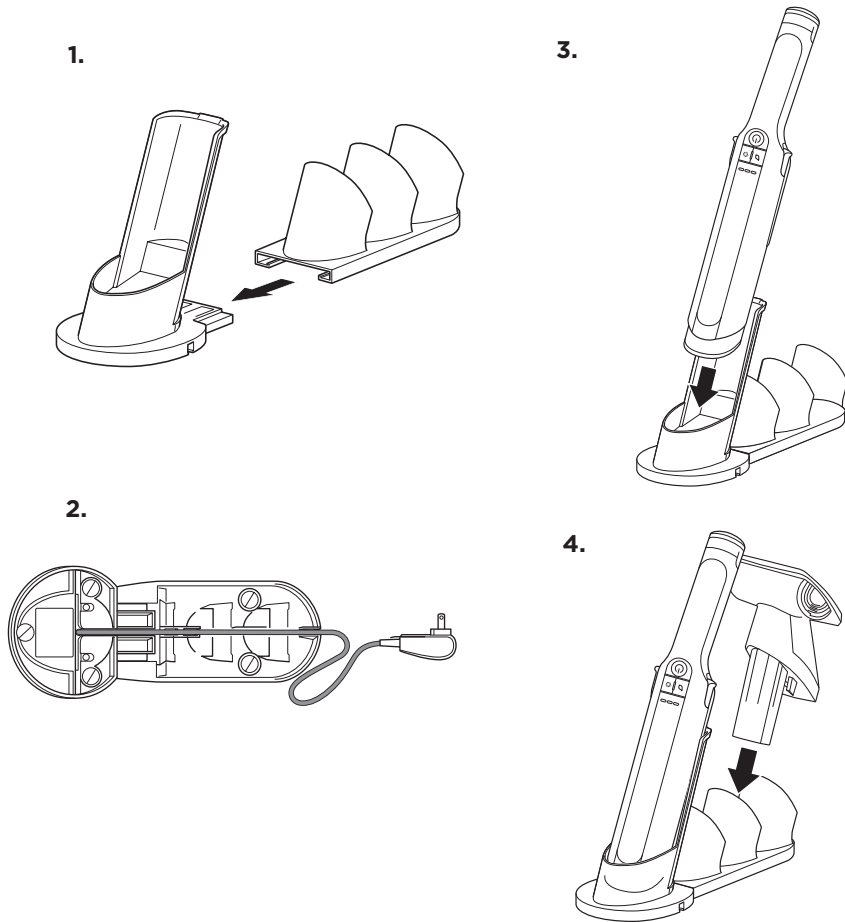

1. Insert the accessory stand from the back of the charging dock, slide, then push it until you hear a click.
2. Feed the charging adapter cord through the groove in the bottom of the charging dock and the accessory stand and pull cord through the notch to the rear.
3. Slide the vacuum cleaner into the opening in the base of the charging dock and stand it up.
4. Insert accessories into the opening on top of the accessory stand.
*The active floor nozzle and wand (included with WV517TW) cannot be stored in the accessory stand.

 
To use the vacuum cleaner appropriately, make sure that all parts are securely connected and fitted in the proper locations.

NOTE: To ensure the stability of the charging dock, make sure to attach the accessory stand to the charging dock when using.


NOTE: In order for the vacuum cleaner to rest securely in the charging slot of the charging dock, make sure to insert accessories into their specified slots. See "Using for the first time" for information about storage positions.

CHARGING

CHARGING IN THE CHARGING DOCK

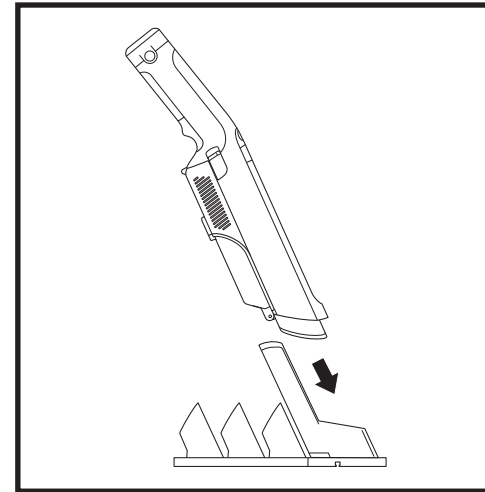

 
Insert the charging adapter into a wall outlet, etc.
Insert the nozzle end of the vacuum cleaner into the charging dock by sliding it in. Charging will begin automatically.

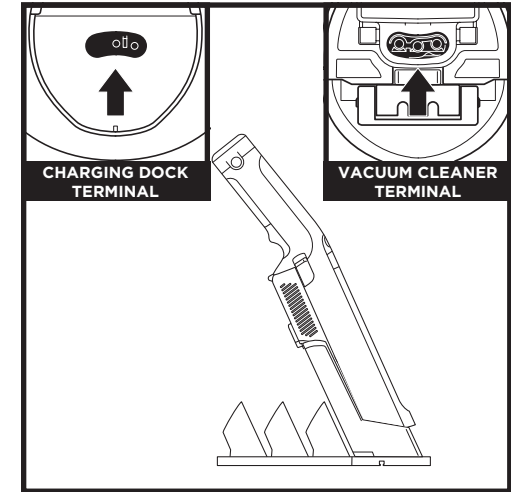

Make sure that the charging terminal of the vacuum cleaner nozzle is firmly in contact with the charging terminal of the charging dock.

Remove the vacuum cleaner from the charging dock to begin using the vacuum cleaner once charging is complete.

 INSERTING AND REMOVING THE BATTERY

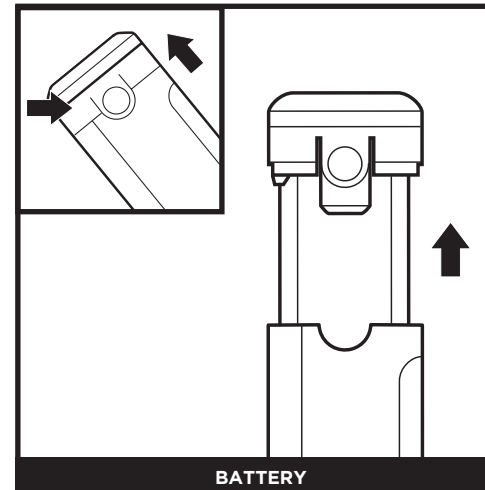

To remove the battery from the vacuum cleaner, pull the battery out while pressing the tab on the cap of the battery. To reinstall it, insert the battery into its original location by sliding it and push until you hear a click.

NOTE: When the vacuum cleaner is inserted into the charging dock, the indicator lights on the vacuum cleaner will flash, indicating that charging has begun. When charging is complete, the three lights will all light, then turn off approximately five minutes later.

NOTE: At time of purchase, batteries are shipped in approximately half-charged condition. To maximize the possible operation time, before first using the vacuum cleaner, please fully charge the battery (this takes approximately 3.5 hours). After beginning to use the vacuum cleaner, the battery life will not be harmed even if the vacuum cleaner is left constantly charging.

 
ABOUT THE LITHIUM-ION BATTERY

Fully charge the battery before first using the vacuum cleaner. It will take approximately 3.5 hours to fully charge the battery for the first time.

CONTINUOUS OPERATION TIME WHEN THE BATTERY IS FULLY CHARGED

The maximum continuous operation time with one fully charged battery is 40 minutes.

CHARGING STATUS AND REMAINING BATTERY LIFE ACCORDING TO INDICATOR LIGHT DISPLAY

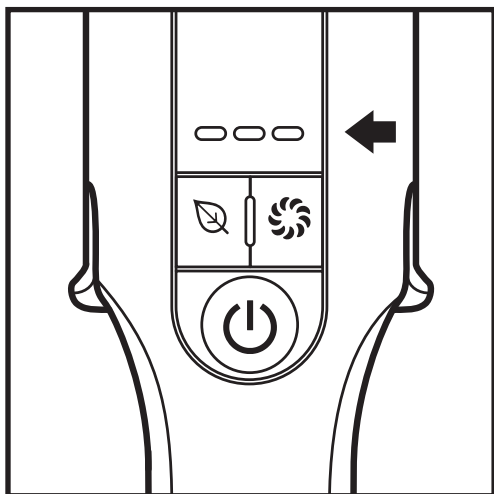

In use

- Three solid black rectangles: Fully charged
- Two solid black rectangles and one empty rectangle: Approximately half of battery life remaining
- One solid black rectangle and two empty rectangles: Battery nearly fully discharged
- Three rectangles with radiating lines (indicating they are off): Charging cut off or no battery life remaining

When charging

- Three rectangles with radiating lines: No battery life
- Two rectangles with radiating lines and one empty rectangle: Half battery life
- One rectangle with radiating lines and two empty rectangles: Close to fully charged
- Three solid black rectangles: Fully charged

NOTE: The indicator lights will turn off approximately five minutes after the battery is fully charged.

 
RECYCLING THE LITHIUM-ION BATTERY

When replacing the lithium-ion battery, dispose of or recycle it in accordance with the local collection rules where you live. Depending on the region where you live, lithium-ion batteries are collected in different ways. Either take the battery you wish to dispose of to a center that collects items for recycling or to the store where you bought the product, or recycle it after contacting the municipality where you live.

NOTE: Like normal lithium-ion batteries, the maximum charge capacity of the Shark rechargeable battery will lessen over the years relative to a new product with 100% capacity.


HOW TO USE

BUTTON FUNCTIONS

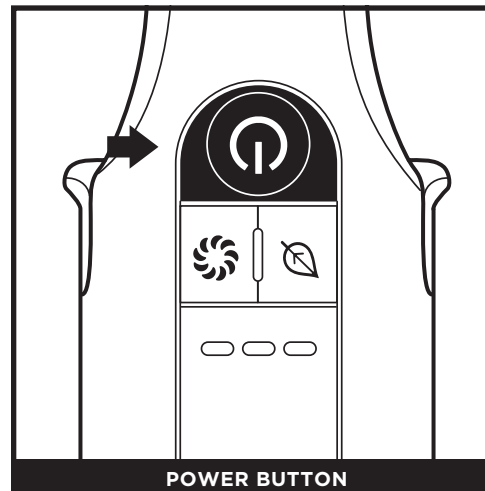


POWER BUTTON

 To turn on the power of the vacuum cleaner, press the power button on the handle. To turn the power off, press the button again. (Normal Mode)

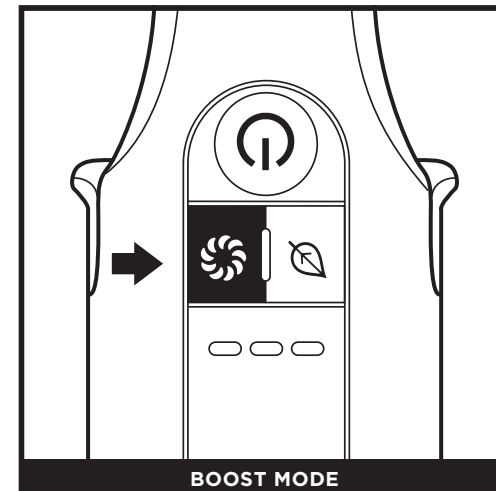


BOOST MODE

 To change to Boost Mode, which provides more powerful suction, press the Boost button. To return to Normal Mode, press the button again.

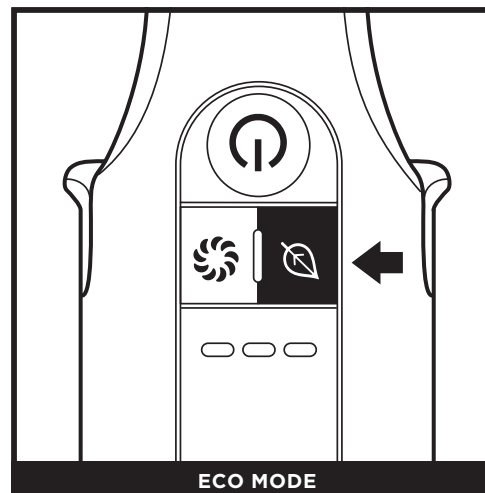

ECO MODE

 Press the Eco button to switch to change to Eco Mode, in which the device makes less noise when running. To return to Normal Mode, press the button again.

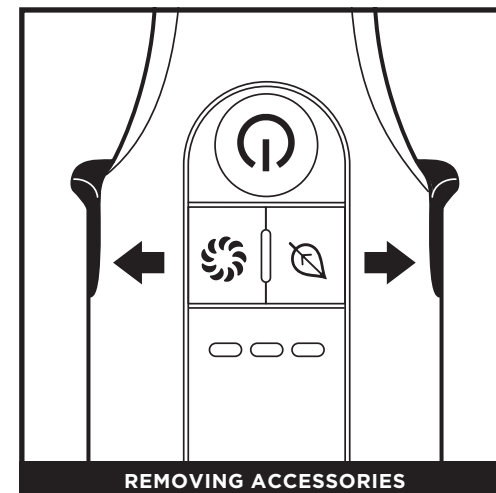


REMOVING ACCESSORIES

To remove accessories that have been installed on the vacuum cleaner, lift the tabs on either side of the handle. After the tabs are lifted, the accessory will be pushed out slightly in front and can be easily removed.

CLEANING WITH ACCESSORIES

 INSTALLING AND REMOVING ACCESSORIES

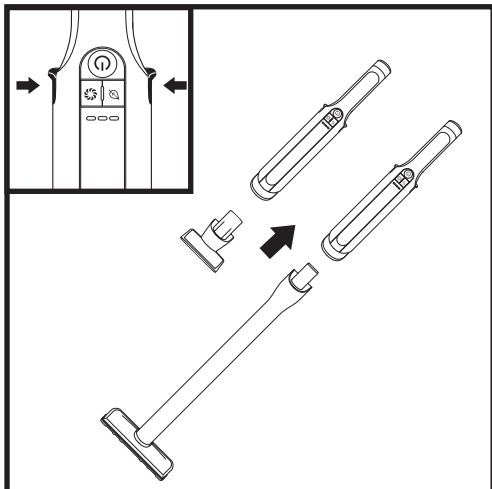

To install accessories on the vacuum cleaner, insert them by sliding them into place on the nozzle opening side.
To remove accessories, lift the grips on either side of the handle.
After the grips are lifted, the accessory will be pushed out slightly in front and can be removed easily.

NOTE: Some accessories may not be included with the vacuum cleaner you have purchased. For details, please see "Included items" on page 3. Go to sharkninja.tw to order replacement parts and accessories.

 
CLEANING WITH ACCESSORIES

USING INCLUDED ACCESSORIES




Duster Crevice Tool

A nozzle for crevices with a brush that can be pulled out.
Suitable for cleaning corners of rooms, baseboards, crevices in furniture, car interiors, and other small spaces.

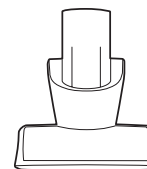


Upholstery Tool

 Suitable for cleaning fine dust from fabric furniture surfaces, etc.

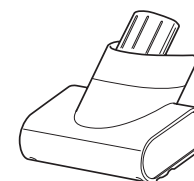

Motorized Hand Tool

 Suitable for removing allergens, dirt, and hair from various surfaces using a powerful motor.

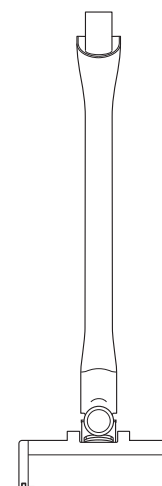


Active Floor Nozzle and Wand


The electric nozzle powerfully removes large debris and dust from the floor, for instance from carpets and rugs. The compact head can easily reach even tight spaces, thoroughly cleaning debris from hard-to-reach areas such as the corners of rooms.

MAINTENANCE

 EMPTYING THE DUST CUP

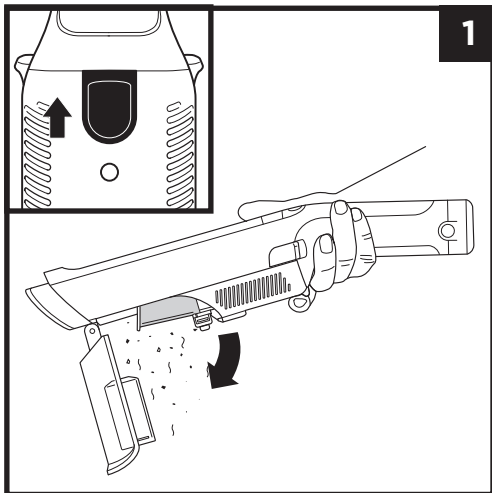


 1. With the power off, hold the dust cup over a trash can. Slide the debris disposal button on the bottom forward to open the dust cup.

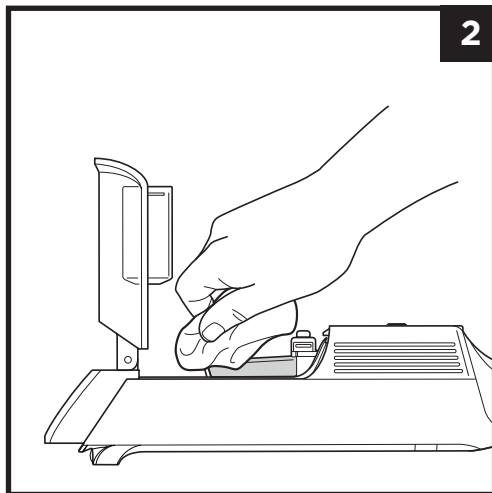


2. As needed, use a dry cloth to remove clumps of debris and clinging dirt.

 CLEANING THE DUST CUP

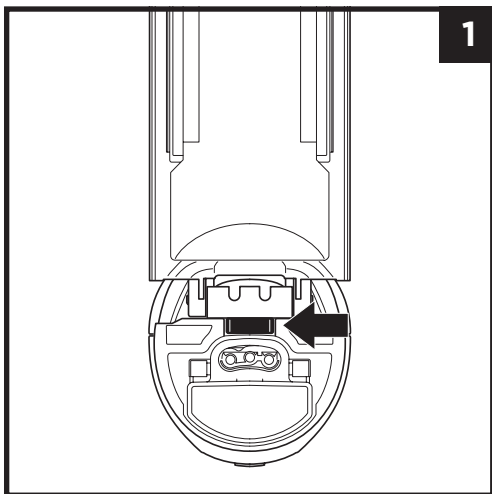

 1. With the power off and the dust cup open, press the release button on the bottom of the dust cup.

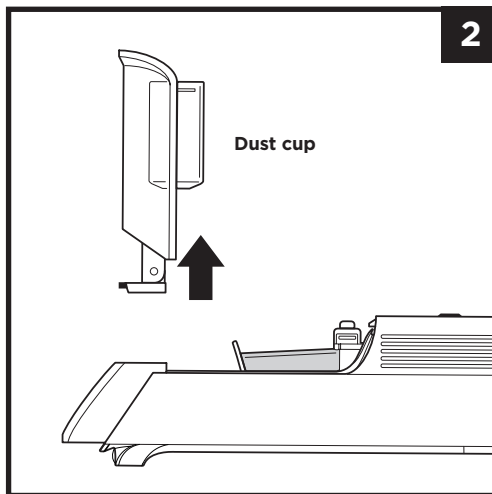


2. While pressing the button, pull out the dust cup. Wash the dust cup by hand with water and detergent and let it dry. When reattaching it, make sure it is completely dry.

NOTE: Do not wash parts and accessories in a dishwasher.

MAINTENANCE

 
CLEANING THE DUST CUP (CONTINUED)

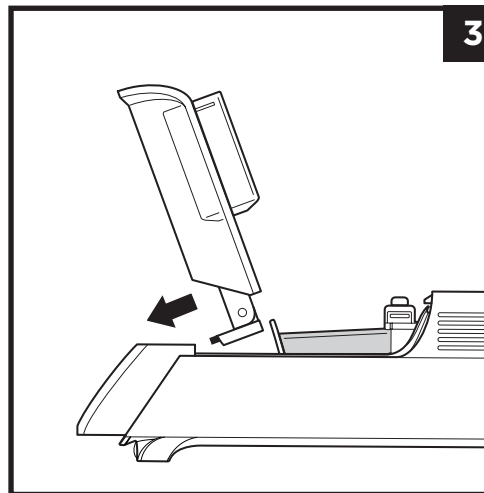


3. To reattach, insert the dust cup into the slot on the bottom of the nozzle by sliding it and push until you hear a click.

NOTE: Clean the dust cup regularly to maintain suction power and to facilitate ease of use, particularly when using the active floor nozzle and wand.

 CLEANING THE FILTER

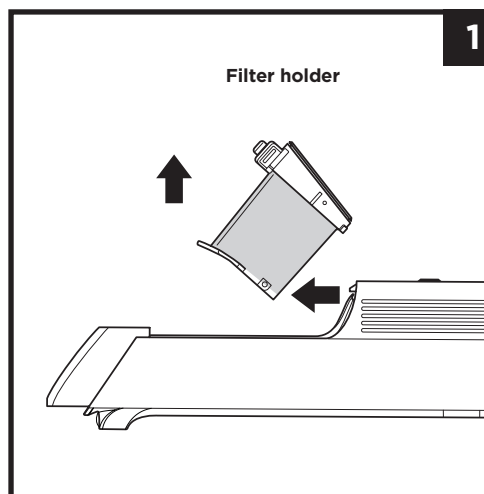

 1. With the power off, holding the vacuum cleaner horizontally, remove the filter holder by lifting it up with the dust cup open.

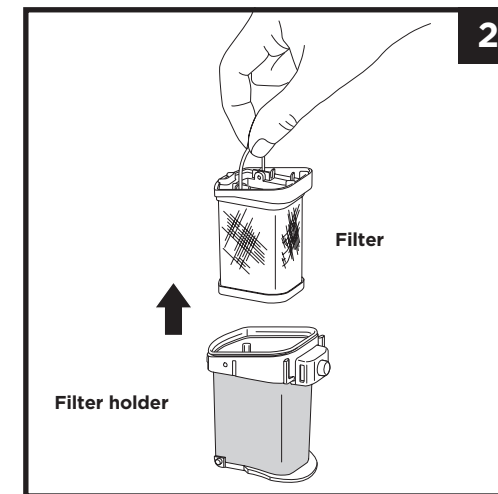


2. Above a trash can, hold the metal ring and pull the filter out of the filter holder. Lightly tap the filter and filter holder to remove debris and dust and then rinse the filter and filter holder with water. When reinstalling the filter and filter holder, make sure that the filter is completely dry before installing it in the vacuum cleaner. Drying time will vary depending on the season and environment. If the filter is used when not fully dry, it may become moldy or cause the vacuum to malfunction.

MAINTENANCE

CLEANING THE NOZZLE HEAD AND BRUSH ROLL (INCLUDED WITH WV517TW)

If debris and foreign objects get caught in the brush roll and are not removed as you continue cleaning, remove this material before continue to use the vacuum cleaner.

 If you have vacuumed up hard items or sharp debris, or if the device makes unusual noises, remove all debris and clinging dust from the nozzle suction port and brush roll.

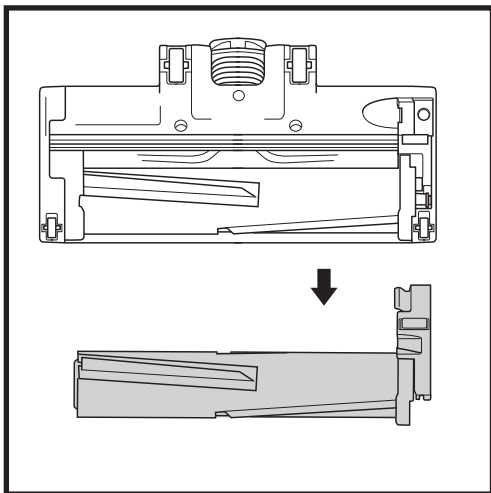

1. Turn off the power to the vacuum cleaner, remove the nozzle from the vacuum cleaner, pull the tab on the back of the nozzle, and remove the brush roll.
2. Remove dust by tapping lightly and wipe the brush roll with a clean, dry cloth. Remove any debris that may be lodged in the skewer-shaped parts inside the nozzle.
3. If the brush roll is extremely dirty, use only water to wash the brush roll by hand and let it dry for at least 24 hours.
4. Once the brush roll is completely dry, replace it in the nozzle and make sure that it is seated firmly in place with a click.

MAINTENANCE

TROUBLESHOOTING

⚠ Warning: To reduce the risk of electric shock and malfunction of the vacuum cleaner, be sure to turn the power off and remove the battery before proceeding.

Power to the vacuum cleaner turns off.

There are several possible reasons if the power to the vacuum cleaner turns off by itself including obstruction of the suction pathway, an issue with the battery, overheating, and so on. In this case, try the following steps.

1. Turn on the power to the vacuum cleaner and check the indicator lights. If the battery needs to be charged, before charging it in the charging dock, ensure that the power button on the vacuum cleaner is turned off.
2. Empty debris in the dust cup and clean the filter (for details, see “Emptying the dust cup” and “Cleaning the dust cup” on page 12 and “Cleaning the filter” on page 13).
3. Check to see if the vacuum cleaner or the suction port of an accessory is obstructed by a foreign object. Remove any objects you may find.
4. If the vacuum cleaner or the battery has overheated, let it stand for at least 45 minutes until it has cooled to room temperature.
5. Press the power button to run the vacuum cleaner.

The vacuum cleaner does not suck up debris. Suction is weak.

 
- The dust cup is full: Remove the debris and empty the dust cup.
- Check whether debris is caught in the nozzle: Remove any stuck debris as needed.
- Check whether the suction pathway of the vacuum cleaner or an accessory is obstructed by a foreign object: Remove any stuck foreign objects as needed.
- Check to see if the filter is dirty. For instructions on installing the filter and drying it after removing and washing it, see “Cleaning the filter” on page 13.

A liquid has been vacuumed up by mistake.

- This could cause an electric shock, short circuit, fire, etc. Promptly turn off the power to the vacuum cleaner and remove the battery from the vacuum cleaner.
- Use a soft cloth or towel to wipe down all areas of the vacuum cleaner suction port that may have gotten wet and let dry for at least 24 hours until fully dry.
- Remove the dust cup, filter holder, and filter from the vacuum cleaner, clean with water, wipe off any moisture with a towel or soft cloth, and let dry for at least 24 hours until fully dry.
- Check that all the parts are fully dry, install the parts and battery, and test the operation of the vacuum cleaner. If something unexpected occurs, for instance if there is a strange odor or the vacuum cleaner fails to operate, turn off the power immediately, remove the battery, and contact customer support.

TROUBLESHOOTING (CONTINUED)


Reasons why the indicator lights of the vacuum cleaner are flashing and solutions

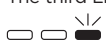Indicator light status	Reason	Solution
The three indicator lights are all flashing white 	The battery is not seated firmly in the vacuum cleaner	If possible, try using another battery. Insert the battery into the vacuum cleaner by sliding it until you hear a click. If the issue is still not solved, contact customer support.
The first and third LEDs are blinking 	The vacuum cleaner may have overheated	Let the vacuum cleaner and battery cool for approximately 45 minutes until they reach room temperature.
The first and second LEDs are blinking 	Excess current or short circuit	Turn off the power, remove any stuck debris, and turn the power back on.
The first LED is blinking 	Remaining battery charge is low	Charge the battery by placing the vacuum cleaner on the charging dock.
The second LED is blinking 	The motor may be overloaded	Turn off the power and check whether debris is caught in the suction port, etc. If there is any debris stuck within, remove it and turn the power back on. If the problem is still not resolved, contact customer support.
The third LED is blinking 	Conduction failure	Contact customer support.
The second and third LEDs are blinking 	It is possible that the charging dock may be malfunctioning	Use the included genuine Shark charging dock. If the issue is still not resolved, contact customer support.
The first and third LEDs are blinking alternately with the second 	The filter may not be seated properly	With the dust cup open, remove the filter holder by lifting it out and pull the filter from the filter holder, holding it by the metal ring. Firmly reseal the filter in the filter holder, return the filter holder to its original position, and close the dust cup. If the issue is still not resolved, contact customer support.


NOTE: If you have carried out the above troubleshooting steps and the vacuum cleaner is still not functioning normally, contact customer support.

- A Duster Crevice Tool
- B Upholstery Tool
- C Motorized Hand Tool
- D Filter
- E Battery
- F Battery charger (for standalone charging)
- G Active Floor Nozzle and Wand

 
A

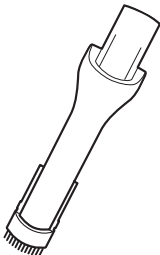


B

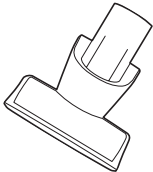 


C

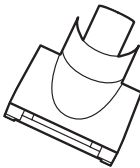 

D

 


E

 

F



 G

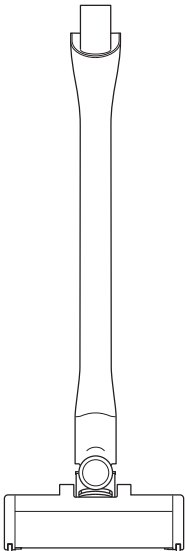

NOTE: Visit sharkninja.tw to order replacement parts and accessories.

ONE (1) YEAR LIMITED WARRANTY

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of **OSONOVA PRIVATE LIMITED TAIWAN BRANCH**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

1. The original unit and/or non-wearable components deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as foam filters, HEPA filters, pads, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at **sharkninja.tw**.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse (e.g., vacuuming up water or other liquids), abuse, negligent handling, failure to perform required maintenance (e.g., not cleaning the filters or not removing debris from the brushroll), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit **sharkninja.tw** for product care and maintenance self-help. Our Customer Service Specialists are also available at **0800-000-605** to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories. We also ask that you register your product online at **sharkninja.tw** and have the product on hand when you call, so we may better assist you.

How to initiate a warranty claim

You must call **0800-000-605** to initiate a warranty claim. In order to better assist you please register your product prior to calling and have your product with you at the time of your call. You will need the receipt as proof of purchase. A Customer Service Specialist will provide you with return and packing instruction information. We also ask that you register your product online at **sharkninja.tw** and have the product on hand when you call, so we may better assist you.

Customer support information Phone number: 0800-000-605

For customer support business hours, please visit sharkninja.tw/support.

You can check with customer support for information regarding the purchase of replacement parts and the classification of consumable and non-consumable items. Also, for information on performing upkeep and maintenance of products on your own, please see sharkninja.tw

About customer privacy

The Company will use customer information provided in connection with this warranty only for the purposes below.

- To provide after-sales service for products purchased.
- To provide customer support, including responses to customer inquiries and requests.
- To provide information on new products, events, and services by direct mail, telephone, and email.
- To carry out investigations including questionnaires and monitoring to improve product quality and services.
- To improve website access, user-friendliness, etc.
- To create, release, and publish statistical data which does not contain personally identifiable information.

To learn about how we uphold customer privacy, please also refer to the Company's privacy policy (sharkninja.tw/privacy).

SharkNinja

OSONOVA PRIVATE LIMITED TAIWAN BRANCH 2F-1, No. 168, Sec. 3, Nanjing E. Rd., Zhongshan Dist., Taipei City.

Telephone number: 0800-000-605 (customer support)

Business hours: 9:00 AM-5:30 PM (not including New Year's Eve/Day and other major holidays)

本使用手冊適用產品：WV517TW

規格

電壓	11.1V
額定耗電功率	205W
連續運轉時間	
• 節能模式	約 40 分鐘
• 一般模式	約 20 分鐘
• 強力模式	約 8 分鐘
充電時間	約 3.5 小時
使用時重量	約 680 公克*

*當電池安裝在裝置中時

目錄

產品介紹

包裝內容物	3
安全警告	4

使用前準備

充電座組裝說明	6
充電	7
關於鋰離子電池	8

使用方法

操作說明	9
使用配件進行清潔	10

維護說明

清空集塵桶	12
清潔集塵桶	12
清潔濾網	13
清潔地板電動吸頭	14
故障排除	15

其他

替換零件與配件	17
保固與註冊說明	18
• 產品註冊	
（線上註冊用）	24

包裝內容物

- Ⓐ 無線手持吸塵器

Ⓑ 窄縫除塵吸頭

Ⓒ 家飾布料清潔吸頭

 
Ⓓ 手持電動吸頭

Ⓔ 電池
- Ⓕ 充電座

Ⓖ 配件收納架

Ⓗ 地板電動吸頭及延長管


*出貨時已安裝於吸塵器內。

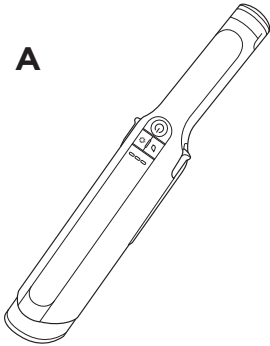


B



 
C

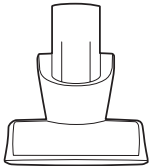


D

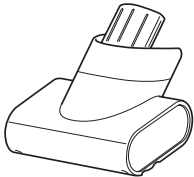 


E

 


F

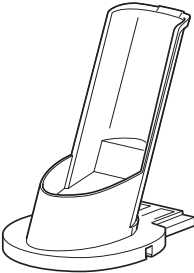 

G

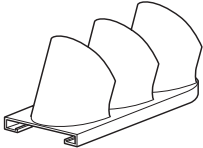 

H

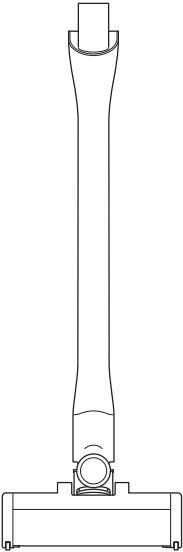 

安全警告

本產品僅限家庭使用。請勿將本吸塵器用於商業用途或清潔以外的目的。
以下說明旨在防止使用者本人或他人受傷及造成財物損害。

若無法將電源插頭插入插座，請將插頭翻轉後重新插入。若將插頭翻轉後仍無法正常插入插座，請聯絡客戶服務。請勿強行將插頭插入插座，亦不得改造插頭以強行配合插座使用。

 **警告** (不當使用本吸塵器，可能造成死亡或嚴重人身傷害。) 為降低發生火災、觸電、人身傷害或財物損害的風險，請遵循下列指示操作。

 **警告** :請勿使用本吸塵器吸取水或其他液體。

關於電源(含電源線、充電器及吸塵器本體)的安全警告

1. 本產品不含可由顧客自行維修的零件。
2. 請勿吸取液體。
3. 請勿拆卸濾網或集塵桶，也請勿讓吸塵器零件接觸水或其他液體。
4. 若吸塵器出現損壞，請立即停止使用。
5. 為避免造成火災、爆炸或人身傷害，使用吸塵器前請檢查吸塵器與充電器，確認沒有任何損壞。若任何零件出現損壞，請立即停止使用吸塵器。
6. 請勿在戶外或潮濕表面上使用。僅限在乾燥表面使用本吸塵器。
7. 若吸塵器無法正常運作，或曾掉落、受損、長時間放置於戶外，或曾浸入水中，請勿使用。
8. 請勿以潮濕的手接觸吸塵器或電源插頭。
9. 電源開啟時，請勿讓吸塵器處於無人看管狀態。
10. 請勿將吸塵器放置在表面溫度可能升高的位置。
11. 將吸塵器連接充電器前，請務必關閉電源。
12. 為本吸塵器充電時，請使用含電源適配器的隨附充電座(XDCKWV500TW)或另行購買原廠 Shark® 電池充電器(WV500TWTW)。請勿使用非 XSBT330AS 型號的電池。使用非指定零件可能造成火災風險。請在穩固且水平的地方為吸塵器充電。
請使用型號DK12-133090C-J電源供應器充電。

13. 即便吸塵器嚴重損壞，也請勿以焚燒方式處理。否則，鋰電池可能會在火中爆炸。

一般使用說明

14. 請勿抓著電源線提起充電器。從插座拔除吸塵器時，請務必握住電源插頭本體。請勿以拉扯電源線方式拔除插頭。
15. 請勿讓充電器電源線接觸高溫表面。
16. 使用吸塵器時，請務必依照使用手冊指示。請勿將吸塵器用於本使用手冊未說明的其他用途。
17. 請在光線充足的場所使用吸塵器。
18. 為避免發生故障，在安裝或拆卸充電器、集塵桶、濾網及其他配件時，請務必先關閉吸塵器電源。
19. 請勿將異物放入吸入口或其他開口處。
20. 若吸塵器開口被堵塞，請勿使用。請清除可能阻塞氣流的異物，如灰塵、棉絮或毛髮。
21. 本產品不適合身體、感官或心智能力受限者，或缺乏經驗與知識者(例如兒童)單獨使用，除非負責其安全的人員在旁監督或指導設備的使用方式。
 - a) 請勿讓兒童將吸塵器拿來玩耍。
 - b) 請勿讓兒童單獨清潔或維護吸塵器，除非監護人在旁監督。

22. 未安裝好集塵桶和濾網時，請勿使用吸塵器。
23. 若吸入路徑阻塞，請勿使用吸塵器。若吸塵器內有異物，請先關閉電源，清除所有異物後，再重新啟動電源。
24. 吸塵器運轉時，請勿讓頭髮、臉部、手指、腳或任何寬鬆衣物靠近吸塵器的任何開口。
25. 僅使用 Shark® 原廠配件。
26. 請勿在低於 10°C (50°F) 或高於 40°C (104°F) 的溫度下充電。用不當的方式或在指定溫度範圍外充電可能損壞電池並增加火災風險。
27. 請將吸塵機及配件存放在溫度不會低於 3°C (37.4°F) 的室內。使用前，請確保吸塵器處於室溫環境下。

集塵桶、濾網及配件

啟動吸塵器之前請檢查以下各項。

28. 保養濾網後，請務必完全晾乾，再重新安裝至吸塵器內，以避免水分進入電子元件。
29. 定期清潔集塵桶與濾網後，請務必正確安裝。
30. 請確認配件未被阻塞，並避免讓頭髮、臉部或身體接觸吸塵器的開口處。
31. 請勿使用非 Shark® 原廠的濾網或配件。若使用非原廠零件，保固將會失效。

一般清潔說明

32. 請勿吸取以下物品：
 - a) 液體
 - b) 較大型物品
 - c) 堅硬或銳利物品(如玻璃、釘子、螺絲、硬幣、石頭等)
 - d) 大量粉塵(如石膏粉、壁爐灰燼、煤渣、麵粉等)。請勿將吸塵器當作集塵器的附件使用。
 - e) 正在冒煙或燃燒的物品(如熱煤、煙蒂、火柴等)
 - f) 易燃或可燃物品(如柴油、汽油、煤油等)
 - g) 有毒物質(如氯漂白劑、氨、排水管清潔劑等)

 
33. 請勿將吸塵器浸入水中或其他液體中。

34. 清潔樓梯時請小心，避免跌倒。

電池使用說明

35. 電池為吸塵器供應電源。為避免故障，搬運吸塵器時請確保電源已關閉，且手指不與電源按鈕接觸。並且請勿在吸塵器電源開啟時進行充電。
36. 請務必使用吸塵器隨附的充電器進行充電。使用非原廠充電器可能造成火災。
37. 使用吸塵器時，僅限使用產品隨附的鋰電池。使用其他電池可能造成人身傷害或火災。
38. 若操作電池不當，可能導致電解液滲漏。這種液體可能引致發炎或灼傷，切勿接觸。若液體觸及皮膚或衣物，或滲入眼睛，請立即以清水沖洗，並盡快就醫。
39. 請將吸塵器存放在室內。為延長電池壽命，請將吸塵器存放在溫度低於 3°C (37.4°F) 或高於 40°C (104°F) 的地方。
40. 請勿讓吸塵器或電池曝露於火焰或 130°C (266°F) 以上的高溫，以免引起爆炸。
41. 本產品不含可由顧客自行維修的零件。請勿擅自改裝或維修吸塵器及電池。吸塵器若經改裝或受損，請勿使用。

充電座組裝說明

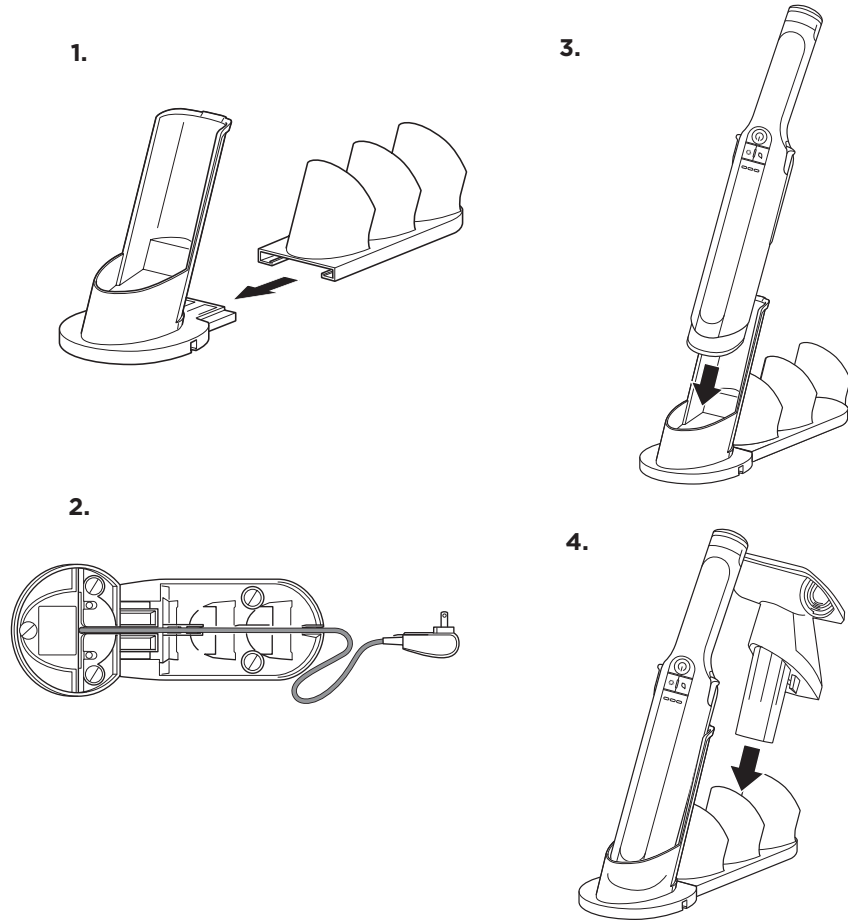


為正確使用吸塵器，請確保所有零件均已牢固連接並安裝於正確位置。

注意：為確保充電座能穩固放置，使用時請務必將配件收納架安裝於充電座上。


注意：為使吸塵器能穩固放置於充電座的充電槽內，請確保將配件插入指定的收納槽中。關於收納位置的相關資訊，請參閱「首次使用」章節。

充電說明

 使用充電座進行充電

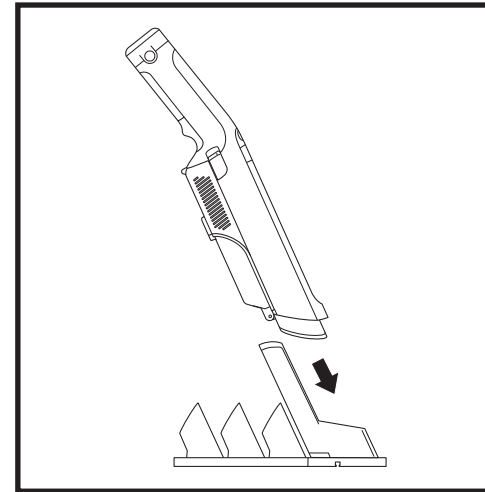


 將充電座電源適配器插入壁式插座等電源插孔中。
將吸塵器的吸頭端滑入充電座以插入，即可自動開始充電。

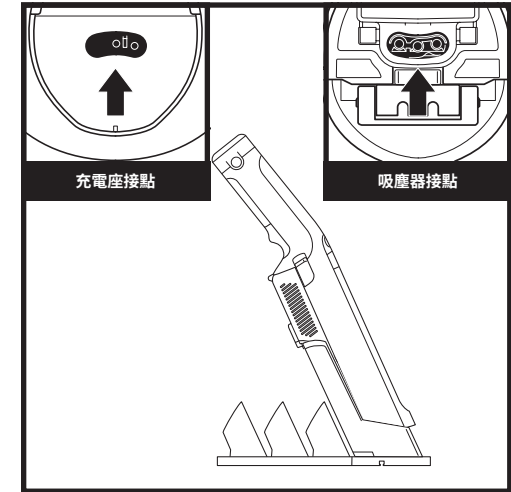

請確認吸塵器吸頭的充電接點與充電座的充電接點緊密接合。
充電完成後，從充電座取下吸塵器即可開始使用。

 安裝與拆卸電池

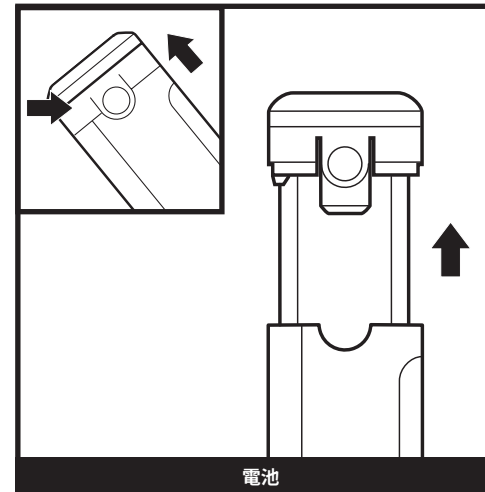

如要從吸塵器中取出電池，請按住電池蓋上的卡扣，同時將電池拉出。重新安裝時，請將電池滑入並推入，直至聽到卡嗒聲，即可安裝到原本的位置。

注意：當吸塵器插入充電座後，吸塵器上的指示燈會閃爍，代表開始充電。充電完成後，三個指示燈將全部亮起，並在約五分鐘後熄滅。
注意：您購買產品後，電池將以充滿約一半電量的狀態出貨。為盡量延長吸塵器的運轉時間，首次使用前請先將電池充滿電（約需 3.5 小時）。

 
關於鋰電池

首次使用吸塵器前，請將電池充滿電。首次充滿電約需 3.5 小時。

電池充滿電後的持續運作時間

使用充滿電的電池，持續運作時間最長為 40 分鐘。

指示燈對應的充電狀態與剩餘電量

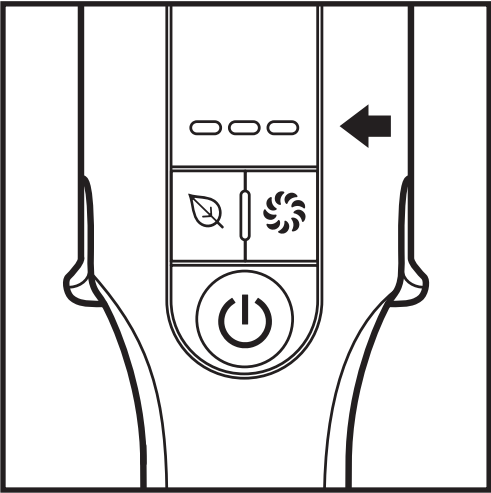

使用中

- 三條全黑條：充滿電
- 兩條全黑條，一條白條：大約剩餘一半電量
- 一條全黑條，兩條白條：電池電量幾乎耗盡
- 閃爍白條，兩條白條：充電已中斷或已耗盡電池電量

充電中

- 一條全黑條，兩條白條，閃爍白條：電池無電量
- 一條全黑條，一條全黑條，一條白條，閃爍白條：電池剩餘一半電量
- 一條全黑條，一條全黑條，一條白條，閃爍白條：幾乎充滿電
- 三條全黑條：充滿電

注意：電池充滿電後約五分鐘，指示燈將熄滅。

 
回收鋰電池

回收鋰電池時，請依照您所在地區的回收規定妥善處理。鋰電池的回收方式會因您所在地區而異。請將欲丟棄的電池帶至資源回收中心，或聯絡當地的環保單位進行回收。

注意：與一般鋰電池相同，Shark 可充電電池的最大充電容量會隨著使用年限而下降，相較於全新產品的 100% 容量會有所減少。

使用方法

電池功能

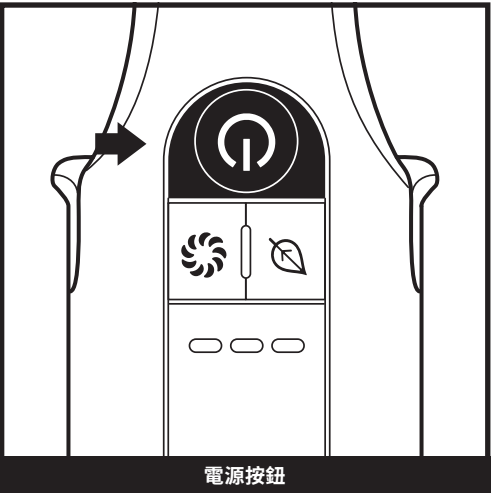


電源按鈕

要開啟吸塵器電源，請按下握把上的電源按鈕。再次按下該按鈕即可關閉電源。（一般模式）




強力模式

 如需切換至吸力更強的強力模式，請按下強力按鈕。再次按下該按鈕則可以返回一般模式。

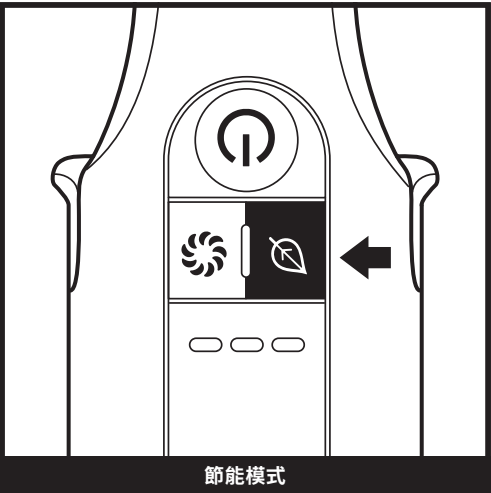

節能模式

 按下節能按鈕可切換至節能模式，當設備在此模式下運轉時的噪音較低。再次按下該按鈕則可以返回一般模式。

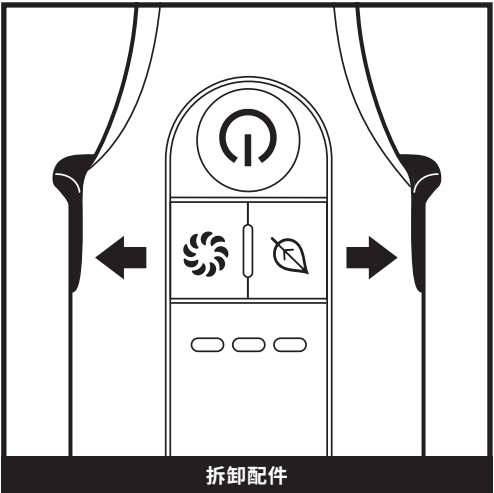


拆卸配件

要拆下安裝在吸塵器上的配件，請將握把兩側的卡扣向上撥。撥起卡扣後，前端的配件會稍微向外彈出，此時即可輕鬆拆下。

使用配件進行清潔

 安裝及拆卸配件

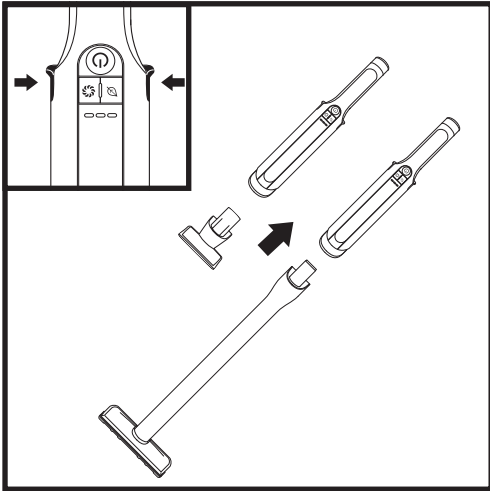


要將配件安裝到吸塵器上，請從吸頭開口處滑入並固定到位。
要拆卸配件，請將握把兩側的卡扣向上撥起。
撥起卡扣後，前端的配件會稍微向外彈出，此時即可輕鬆拆下。

注意：您購買的吸塵器可能未附帶某些配件。具體情況請查閱第 3 頁的「包裝內容物」。如有需要，請造訪 sharkninja.tw 訂購替換零件及配件。


使用配件進行清潔

 使用隨附配件




窄縫除塵吸頭

 適合清潔狹窄縫隙的吸頭，附有可以拉出的刷頭。
可用於清潔房間角落、踢腳板、家具縫隙、車內及其他狹小空間。

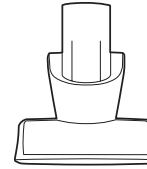


家飾布料吸頭

 適用於清潔布質家具等表面的細微灰塵。

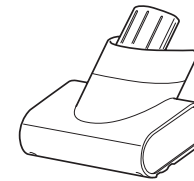

手持電動吸頭

 適用於配合強力馬達清除各種表面的過敏原、塵土及毛髮。

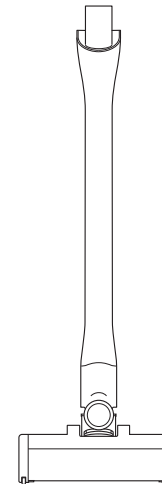


地板電動吸頭及延長管


電動吸頭能強力清除地板上的較大碎屑和塵土，
例如地毯和地墊上的污垢。小巧的吸頭能輕鬆伸入
狹小空間，徹底清潔房間角落等難以觸及的區域。

維護說明

 清空集塵桶

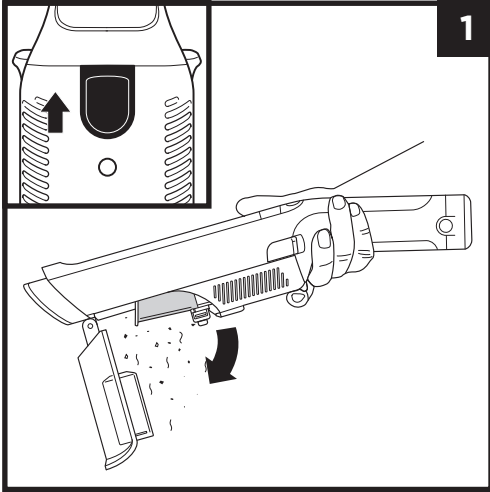


 1. 關閉電源的狀態下，舉起集塵桶停在垃圾桶上方。將集塵桶底部的傾倒按鈕向前滑動，即可打開集塵桶。

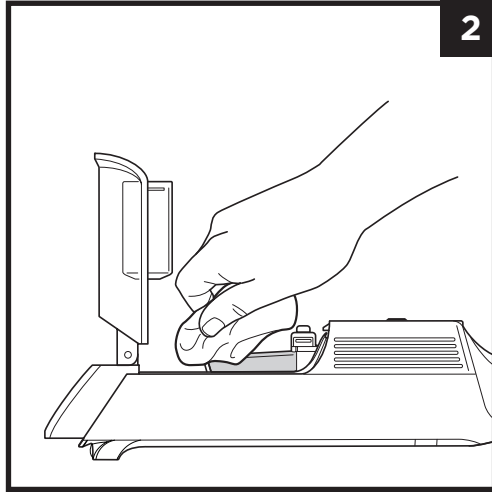


2. 如有需要，可使用乾布清除結塊的碎屑及附著的污垢。

 清潔集塵桶

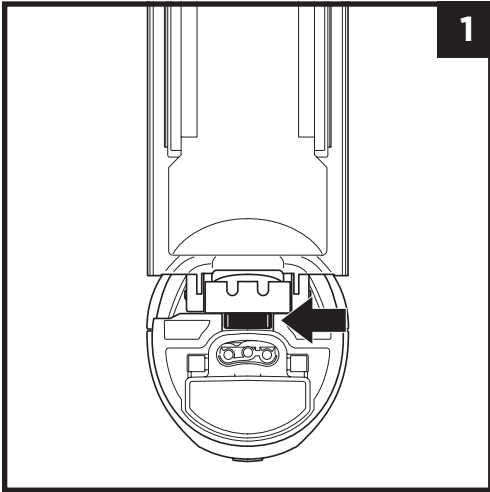

 1. 關閉電源並打開集塵桶後，按下集塵桶底部的釋放按鈕。

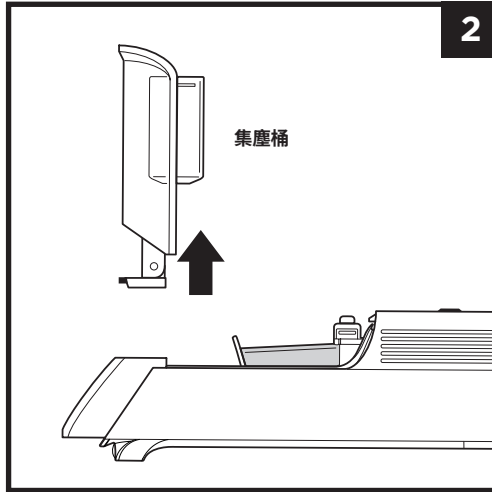


2. 按住按鈕，同時向外拉出集塵桶。用水和清潔劑手洗集塵桶，然後晾乾。重新安裝時，請確保集塵桶已完全乾燥。

注意：請勿將零件及配件放入洗碗機清洗。

維護說明

 
清潔集塵桶 (續)

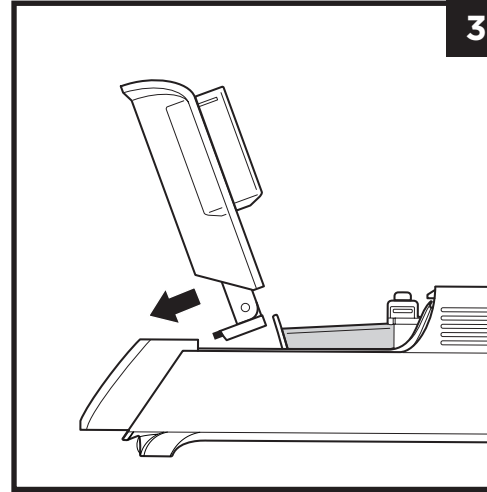


3. 重新安裝時，將集塵桶插入吸頭底部的卡槽，滑入並推入直至聽到咔噠聲。

注意：請定期清潔集塵桶，以維持設備吸力，以更方便使用，尤其在使用地板電動吸頭及延長管。

 清潔濾網

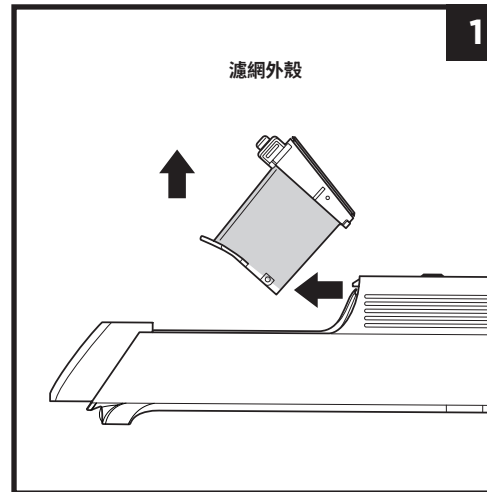

 1. 關閉電源後，水平握持吸塵器，打開集塵桶，然後向上提起濾網外殼將其取出。

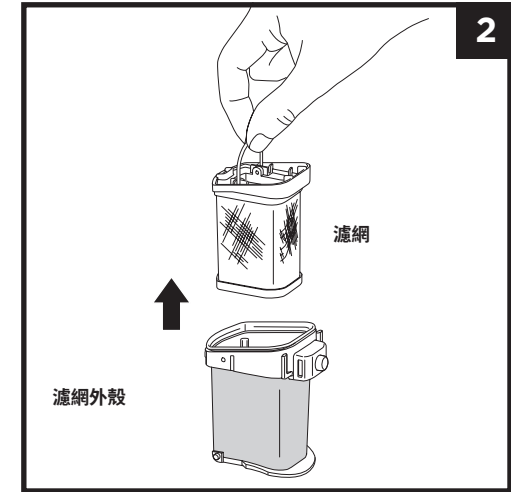


2. 在垃圾桶上方，抓住金屬環，將濾網從濾網外殼中拉出。輕輕拍打濾網和濾網外殼以抖落碎屑和塵土，然後用清水沖洗濾網和濾網外殼。重新安裝濾網和濾網外殼時，請確保濾網已完全乾燥。乾燥時間會因季節和環境而有所不同。若濾網未完全乾燥即使用，可能會發霉或造成吸塵器故障。

清潔吸頭與毛刷滾輪 (WV517TW 型號隨附配件)

若滾刷被異物或雜物纏住，請先行清除再繼續使用吸塵器。

 若吸入堅硬物品或尖銳碎屑，或設備發出異常聲響，請清除吸頭吸入口及毛刷滾輪上的所有雜物與附著塵土。

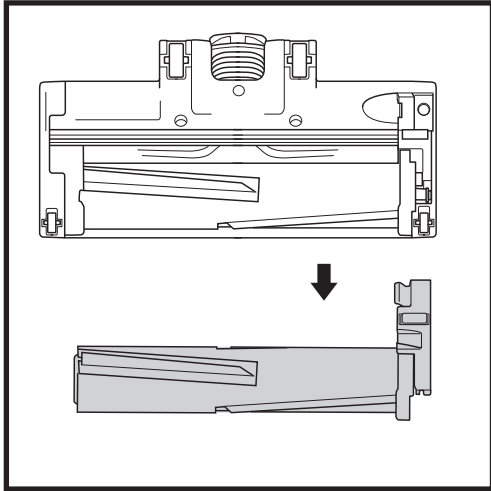

1. 關閉吸塵器電源，卸下吸頭，拉出吸頭背部的卡扣即可取出毛刷滾輪。
2. 輕拍以抖落灰塵，並以乾淨的乾布擦拭毛刷滾輪。清除吸頭內部針狀物上可能卡住的異物。
3. 若毛刷滾輪非常髒，請僅使用清水手洗，並至少風乾 24 小時後再使用。
4. 毛刷滾輪完全乾燥後，請將其裝回吸頭中，並確保固定到位（會發出咔嚓聲）。

故障排除

警告：為降低觸電及吸塵器故障風險，操作前請務必關閉電源並拆除電池。

吸塵器電源關閉。

若吸塵器電源自動關閉，可能原因包括吸入路徑阻塞、電池異常、過熱等。遇到這種情況，請嘗試按以下步驟操作。

1. 請開啟吸塵器電源，觀察指示燈狀態。若電池需要充電，請先確保吸塵器的電源按鈕已關閉，再放入充電座進行充電。
2. 清空集塵桶內的碎屑並清潔濾網（詳細說明請見第 12 頁「清空集塵桶」及「清潔集塵桶」，以及第 13 頁「清潔濾網」）。
3. 請檢查吸塵器本體或配件的吸入口是否被異物阻塞。將發現的異物清除。
4. 若吸塵器或電池過熱，請靜置至少 45 分鐘，待機器完全冷卻至室溫後再行使用。
5. 請按下電源鍵，啟動吸塵器。

吸塵器無法吸取碎屑。吸力不足。

- 集塵桶已滿：請清除碎屑並清空集塵桶。
- 檢查吸頭是否被碎屑卡住：如有碎屑卡住，請將其清除。
- 檢查吸塵器本體或配件的吸入路徑是否有異物阻塞：如有異物阻塞，請將其清除。
- 檢查濾網是否髒污。關於拆卸、清洗及乾燥濾網後進行安裝的說明，請參閱第 13 頁「清潔濾網」。

不小心吸入液體。

- 這可能引發觸電、短路或火災等風險。請立即關閉吸塵器電源，並取出電池。
- 使用軟布或毛巾擦拭吸塵器吸入口所有可能沾濕的部位，並靜置至少 24 小時，直至完全乾燥。
- 拆下集塵桶、濾網外殼與濾網，以清水清洗，並使用毛巾或軟布擦乾水分後，靜置至少 24 小時，直至完全乾燥。
- 確認所有零件均已完全乾燥後，重新安裝零件與電池，並測試吸塵器的運作情況。如出現異常情況，例如產生異味或吸塵器無運作，請立即關閉電源、取出電池，並聯絡客戶服務。

維護說明

故障排除 (續)








吸塵器指示燈閃爍的原因與對應解決方法

指示燈狀態	原因	解決方法
三個指示燈同時閃爍白光 	電池未牢固安裝於吸塵器中	如有可能，請嘗試使用另一顆電池。將電池插入吸塵器內，直到聽見咔噠聲，確保已安裝牢固。若問題仍未解決，請聯絡客戶服務。
第一與第三顆指示燈閃爍 	吸塵器可能過熱	請將吸塵器及電池靜置約 45 分鐘，待冷卻至室溫。
第一及第二顆指示燈閃爍 	電流過大或發生短路	請關閉電源，清除所有卡住的異物，然後重新開啟電源。
第一顆指示燈閃爍 	剩餘電量不足	將吸塵器放置於充電座上進行充電。
第二顆指示燈閃爍 	馬達可能過載	請關閉電源，並檢查吸入口等處是否被異物卡住。如有異物卡住，請將其清除，再重新開啟電源。若問題仍未解決，請聯絡客戶服務。
第三顆指示燈閃爍 	導電故障	請聯絡客戶服務。
第二及第三顆指示燈閃爍 	充電座可能發生故障	請使用隨附的 Shark 原廠充電座。若問題仍未解決，請聯絡客戶服務。
第一及第三顆指示燈與第二顆指示燈交替閃爍 	濾網可能未妥善安裝到位	打開集塵桶後，提起濾網外殼將其取出，並握住金屬環將濾網從濾外殼拉出。 將濾網牢固地重新安裝在濾網外殼中，將濾網座放回原位，然後關閉集塵桶。 若問題仍未解決，請聯絡客戶服務。

注意：若您已依照上述故障排除步驟操作，但吸塵器仍無法正常運作，請聯絡客戶服務。

替換零件與配件

       - Ⓐ 窄縫除塵吸頭
- Ⓑ 家飾布料吸頭
- Ⓒ 手持電動吸頭
- Ⓓ 濾網
- Ⓔ 電池
- Ⓕ 電池充電器 (單獨為電池充電)
- Ⓖ 地板電動吸頭及延長管

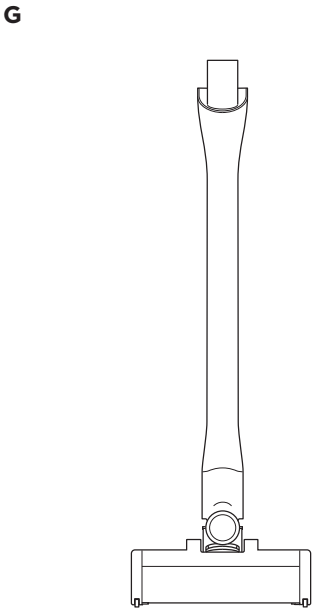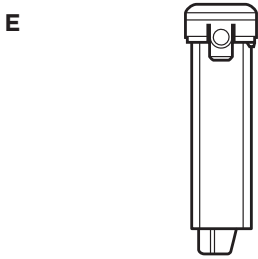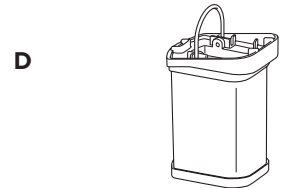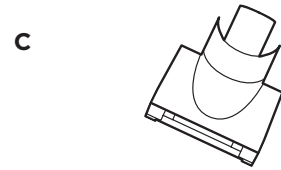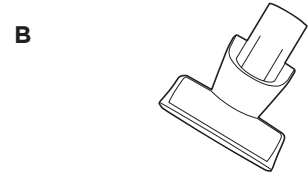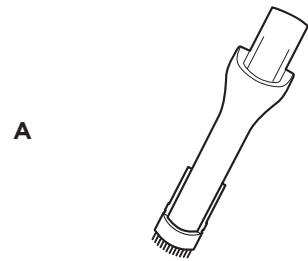

注意：您可造訪 sharkninja.tw 訂購替換零件及配件。

一 (1) 年有限電池保固

此一 (1) 年有限保固適用於從新加坡商維諾瓦股份有限公司臺灣分公司授權經銷商購買的產品。保固範圍僅適用於原購買人及原產品，且不得轉讓。

SharkNinja 保證在正常家庭使用條件下，並依照《使用者指南》中規定的要求進行保養的情況下，本電池自購買日起一 (1) 年內不會出現材料或工藝上的缺陷，惟需遵守以下條件與排除項目：

保固範圍包括哪些項目？

1. 經 SharkNinja 全權判定為有缺陷的原電池，可在原購買日期起一 (1) 年內進行更換。
2. 若提供更換電池，保固期限將於收到更換電池後六 (6) 個月或原保固期剩餘時間內（取較長者）結束。SharkNinja 保留以等值或更高價值產品進行更換的權利。

保固範圍不包括哪些項目？

1. 電池的正常耗損。如需確保電池正常運作，請在適當溫度下儲存和使用。替換電池可於 sharkninja.tw 購買。
2. 遭到或用於商業用途的電池。
3. 因誤用、濫用、疏忽操作（如將電池暴露於液體或極端高/低溫環境）、未按要求进行維護，或運輸過程中不當處理所造成的損壞。
4. 衍生性和附帶性損害。
5. 非 SharkNinja 授權維修人員進行維修所導致的損壞。此類損壞包括由非 SharkNinja 授權人員在進行運送、修改或維修的過程中，所導致的 SharkNinja 產品（或其零件）損壞。

如何獲得維修服務

若您的電池在正常家庭使用條件下於保固期內無法正常運作，請造訪 sharkninja.tw 查詢產品保養與維護的自助服務。您也可透過致電 **0800-000-605** 聯絡我們的客戶服務專員，他們能為您提供產品支援與保固服務選項。為了更有效協助您，請於 sharkninja.tw 完成產品線上註冊，並在致電時備妥產品。

如何申請保固服務

請至 sharkninja.tw 上傳有效購買憑證(須包含購買日期與商品明細，如發票、出貨單 或其他相關證明)，並登錄產品序號，即可完成線上保固註冊。

客戶服務資訊 電話號碼：0800-000-605

客戶服務時間請造訪 sharkninja.tw/support 查詢。

您可向客戶服務查詢有關替換零件的購買資訊，以及耗材與非耗材的分類說明。

另外，如需瞭解自行保養及維護產品的資訊，請造訪 sharkninja.tw 查詢。

關於客戶隱私

對於客戶因本保固提供的資訊，本公司只會用於以下目的。

- 為所購產品提供售後服務。
- 提供客戶服務，包含回應客戶的詢問與請求。
- 以郵寄、電話及電子郵件方式提供有關新產品、活動及服務的資訊。
- 執行問卷及監測等調查工作，以提升產品品質及改善服務。
- 改善網站的訪問效能及使用便利性。
- 製作、發布及公開不含個人識別資訊的統計資料。

如需進一步瞭解我們如何保障客戶隱私，請參閱本公司的隱私權政策 (sharkninja.tw/privacy)。

SharkNinja

新加坡商維諾瓦股份有限公司臺灣分公司 臺北市中山區南京東路 3 段 168 號 2 樓之 1

電話號碼：0800-000-605 (客戶服務)

REGISTER YOUR PURCHASE

sharkninja.tw
0800-000-605



RECORD THIS INFORMATION

Model Number: _____
Date Code: _____
Date of Purchase: _____
(Keep receipt)
Store of Purchase: _____

NOTE: The model number and serial number can be found by checking the label on the vacuum cleaner.

Please read the manual fully and keep it in a safe place.
This manual is intended to help you make use of all features of your Shark rechargeable handheld vacuum cleaner for many years to come.

If you have any questions, please call customer support.

註冊您購買的產品

sharkninja.tw
0800-000-605



請記錄此資訊

型號: _____
日期代碼: _____
購買日期: _____
(請保留收據)
購買商店: _____

注意: 產品型號及序號可在吸塵器上的標籤上找到。

請完整閱讀本使用手冊，並妥善保管以備日後查閱。
本使用手冊旨在協助您充分善用 Shark 可充電手持吸塵器的所有功能，確保長久使用無虞。

如有任何疑問，歡迎致電客戶服務。

限用物質含有情況標示聲明書

Declaration of the Presence Condition of the Restricted Substances Marking

設備名稱: Shark EVOPOWER DX 手持吸塵器 Equipment name		型號(型式): WV517TW Type designation (Type)				
單元Unit	限用物質及其化學符號 Restricted substances and its chemical symbolsv					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁺⁶)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
PCBA	○	○	○	○	○	○
電機	○	○	○	○	○	○
充電端子支撐架	○	○	○	○	○	○
塑膠外殼	○	○	○	○	○	○
內部配線	○	○	○	○	○	○
備考1. `超出0.1 wt %` 及 `超出0.01 wt %`係指限用物質之百分比含量超出百分比含量基準值。 Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition. 備考2. `○`係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. 備考3. `—`係指該項限用物質為排除項目。 Note 3: The “—” indicates that the restricted substance corresponds to the exemption.						

掃描以註冊:
sharkninja.tw
型號:
XXXXXXXX
製造編號:
Y20A3109Z1A7



製造編號中前四位為製造日期編號。
In Manufacture Code, the first 4 letters are Manufacture Date Code.
以上圖中“Y20A”為例，Y代表製造月份(參考表A)，20代表製造日期，A代表製造年份(參考表B)。
Take “Y20A” in above picture as example, “Y” means Month (refer to Table A), “20” means Date, “A” means Year (refer to Table B).

表A Table A	
月份 Month	編號 Code
1 月 January	A
2 月 February	F
3 月 March	H
4 月 April	J
5 月 May	K
6 月 June	Q
7 月 July	R
8 月 August	S
9 月 September	U
10 月 October	Z
11 月 November	X
12 月 December	Y

表A Table A	
年份 Year	編號 Code
2016	A
2017	F
2018	H
2019	J
2020	K
2021	Q
2022	R
2023	S
2024	U
2025	Z
2026	X
2027	Y
接下來 Next	從A重新開始 Start over with “A”

Disassembly instructions:

- Batteries must be removed from the appliance before being discarded.
- The appliance must be disconnected from the mains before removing the battery.
- Batteries should be disposed of safely.
- Press the battery latch and remove the battery from the appliance.

電池警語：

- 電器報廢前應取出電池
- 取出電池前電器應切斷電源
- 應安全地丟棄電池

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Owner's Guide is designed to help you get a complete understanding of your new Shark™ EVOPOWER™ rechargeable handheld vacuum cleaner.

104105臺北市中山區南京東路3段168號2樓之1

2F.-1, No. 168, Sec. 3, Nanjing E. Rd., Zhongshan Dist., Taipei City 104105.

Customer Support: 0800-000-605

Manufacturer: SharkNinja Operating LLC

Importer: OSONOVA PRIVATE LIMITED TAIWAN BRANCH

Address: 2F.-1, No. 168, Sec. 3, Nanjing E. Rd., Zhongshan Dist., Taipei City 104105.

Tel: 0800-000-605

sharkninja.tw

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

請仔細閱讀並保留以供日後參考。

本使用者指南旨在協助您全面瞭解全新

Shark™ EVOPOWER™ 可充電手持吸塵器的各項產品內資訊。

104105臺北市中山區南京東路3段168號2樓之1

2F.-1, No. 168, Sec.3, Nanjing E. Rd., Zhongshan Dist., Taipei City 104105.

客戶支援部門: 0800-000-605

製造商: SharkNinja Operating LLC

進口商: 新加坡商維諾瓦股份有限公司台灣分公司

進口商: OSONOVA PRIVATE LIMITED TAIWAN BRANCH

地址: 104105臺北市中山區南京東路3段168號2樓之1

地址: 2F.-1, No. 168, Sec.3, Nanjing E. Rd., Zhongshan Dist., Taipei City 104105.

客服電話: 0800-000-605

sharkninja.tw

圖例可能與實際產品有所不同。我們將持續努力改善我們的產品，因此本文中的規格可能會有所變更，恕不另行通知。

本產品可能受到一項或多項美國專利的保護。請參閱 sharkninja.com/patents 以瞭解更多資訊。

© 2025 SharkNinja Operating LLC. SHARK and EVOPOWER are trademarks of SharkNinja Operating LLC. RBRC is a trademark of Rechargeable Battery Recycling Corporation.

© 2025 SharkNinja Operating LLC。SHARK 和 EVOPOWER 是 SharkNinja Operating LLC 的商標。RBRC 是 Rechargeable Battery Recycling Corporation (充電電池回收公司) 的商標。

WV517TW_IB_MP_Mv12_250801